

Austria

Internorm Fenster GmbH

A-1230 Wien · Vorarlberger Allee 27

Tel.: +43 (1) 605 72-0

E-Mail: wien@internorm.com

A-4061 Pasching · Kremstal Straße 5

Tel.: +43 (7229) 770-2440

E-Mail: mittewest@internorm.com

A-6020 Innsbruck · Bleichenweg 14

Tel.: +43 (512) 36 10 48-0

E-Mail: mittewest@internorm.com

A-8502 Lannach · Industriestr. 2

Tel.: +43 (3136) 825 00-0

E-Mail: lannach@internorm.com

Germany

Internorm-Fenster GmbH

Zentrale Deutschland

D-93059 Regensburg · Nußbergerstr. 6b

Tel.: +49 (941) 464 04-0

E-Mail: regensburg@internorm.com

Switzerland

Internorm AG

CH-5502 Hunzenschwil · Römerstrasse 25

Salle d'Exposition Suisse Romande

CH-1030 Bussigny · Rue de l'Industrie 58

Internorm-Fenster-Telefon 0848 00 33 33

info-swiss@internorm.com

France

Internorm Fenêtre SAS

BP 20073 · 10 rue Alcide de Gasperi

Zone Espale

F-68392 SAUSHEIM CEDEX

Tél.: +33 (3) 89 31 68 10

E-Mail: sausheim@internorm.com

Italy

Internorm Italia S.r.l.

I-38121 Trento (TN) · Via Bolzano, 34

Tel.: +39 (0461) 95 75 1

E-Mail: italia@internorm.com

Slovenia

Internorm okna d.o.o.

SLO-1000 Ljubljana · Koseška cesta 8

Tel.: +386 (1) 581 92 55

E-Mail: internorm.okna@siol.net

Czech Republic

Internorm-okno s.r.o.

CZ-190 00 Praha 9

Ocelářská 7 · Vysočany

Tel.: +420 235 09 04 41-43

E-Mail: internorm@internorm.cz

Slovakia

Internorm s.r.o.

SK-821 04 Bratislava · Galvániho 15/B

Tel.: +421 (2) 436 327 82

E-mail: office@internorm-okna.sk

Hungary

Internorm Ablak Kft.

H-2051 Biatorbágy · Sasbérc út 1

Tópark Ingatlankomplexum

Tel.: +36 (30) 650 6448

E-Mail: internorm@internorm.hu

United Kingdom

Internorm Windows UK Ltd

Unit D · Colindale Business Park

2-10 Carlisle Road · London, NW9 0HN

Tel.: +44 (0) 208 205 9991

E-Mail: office@internorm.co.uk

SOAL 03/2024 | Internorm International GmbH, Printer Friedrich VDV, Linz | Subject to changes.

Manual

Instructions for use. Maintenance, care and warranties.

Nothing compares to
Internorm[®]
Windows – Doors

Your personal order number

Date	Stamp, signature

Warranties

Warranty

10
YEARS

- On weather resistance against unnatural change of colour and cracks in surfaces of:
 - white UPVC window and door profiles, except for mitre cracks.
 - inside foil covered UPVC window and door profiles, except for mitre cracks.
 - anodised (a form of metal coating) or powder coated aluminium window and door profiles.
- Against condensation between the sealed panes of insulating glass.
- On the glue connection of glued Georgian/feature bars.
- On the function of the material compound timber, thermal foam and aluminium profiles in timber aluminium composite products when adhering to the Internorm fitting and maintenance guidelines.
- On the function of the glued connection and sealing of the insulating glass panes with window profiles in timber aluminium composite products when adhering to the Internorm fitting and maintenance guidelines.
- Where goods are supplied with marine grade aluminium finish.

Warranty

5
YEARS

- For PVD coated entrance door handles against corrosion, if no mechanical damage is apparent.
- On weather resistance against unnatural colour changes or cracks in door filling surfaces.
- This 5-year warranty does not apply to the SD10 real-timber surface.

Warranty

3
YEARS

- On weather resistance against unnatural change of colour and cracks in surfaces of anodised or powder coated aluminium roller shutters, blinds and window shutter profiles.
- On the function of window and door hardware when the Internorm fitting and maintenance guidelines have been followed.
- On weather resistance against unnatural change of colour and cracks in surfaces of UPVC roller shutter profiles.

Content

Thank you for choosing an Internorm product, which has been manufactured to the highest standards in technology as well as design. Internorm's wealth of experience and focus on innovative technical solutions in window construction goes back 93 years. By choosing Internorm you have the assurance of dealing with Europe's largest window brand.

1. Product liability and warnings	4
2. Operation	14
2.1. Windows and window system doors	14
2.2. Sliding elements	18
2.3. Front entrance doors	32
2.4. Sun and insect protection	58
2.5. I-tec ventilation IV40	62
2.6. Permanent ventilator Aeromat midi HY F3	72
2.7. I-tec Shading	73
2.8. Opening control (wireless)	77
3. Adjustments – adjustment possibilities	78
3.1. Concealed hardware	79
3.1.1. VV hardware (concealed standard)	79
3.1.2. VV hardware (concealed TopStar)	83
3.1.3. I-tec Secure (concealed flap locking)	87
3.2. Exposed hardware	90
3.3. More hardware versions	93
3.4. Front entrance doors	108
3.5. Adjustment possibilities, window shutter	129
3.6. Insect protection	130
4. Cleaning, care and maintenance	131
4.1. General information	131
4.2. Hardware	132
4.3. Cleaning tips for glass surfaces/glass joints and glass corners	144
4.4. Gaskets	145
4.5. UPVC surfaces	145
4.6. Timber surfaces with timber/aluminium elements	146
4.7. Timber surfaces with front entrance door designer elements	147
4.8. Anodised or powder-coated aluminium surfaces	148
4.8.1. Requirements and process of cleaning of aluminium surfaces	148
4.8.2. Cleaner for anodised surfaces	149
4.8.2.1. Conservation agent for anodised surfaces	149
4.8.3. Cleaning agent for powder-coated surfaces	150
4.8.3.1. Conservation agent for powder-coated surfaces	150
4.9. Cleaning instructions for stainless steel	151
4.10. Care and maintenance of I-tec ventilation	151
4.11. Specific warnings for timber/aluminium elements	151
5. Comfort	152
6. Ventilation	153
7. Warranties	156
7.1. General information	159
7.2. Fitting advice	165
7.3. Technical limitations of the warranty	165

**Enjoy your
new windows
and doors from
Internorm**



Nothing compares to

Internorm
Windows – Doors

**You have made the right choice by buying
quality products from Internorm.**

Thank you again for your confidence in our products. Useful information and helpful tips on how best to clean and take care of your product can be found by scanning the **QR code** in the rebate of your window or, in the case of doors, in the frame (note: timber/aluminium doors do not have a QR code). If you have further questions that have not been answered in this booklet, please contact us and one of our staff will be happy to assist you.

+44 (0)208 205 9991

Or send us an email: office@internorm.co.uk
More information is also available on uk.internorm.com

MANUAL

INSTRUCTIONS FOR USE.
MAINTENANCE, CARE AND WARRANTIES.



<https://www.internorm.com/de-at/service/downloads/gebrauchsanweisungen>

www.internorm.com

1. PRODUCT LIABILITY | WARNINGS

GENERAL INFORMATION

Internorm windows, doors, sun protection elements and accessories are high-quality products.

In order to ensure long term serviceability and value retention as well as to prevent personal injury and damage to property, professional service and maintenance is essential.

The information contained in this booklet forms the basis for this. Disregarding this information can lead to exclusion from warranty and product liability claims.

Functional impairments or wear and tear of parts that usually occur within the limits of normal and proper use are not covered by warranty provisions or obligations.

Excluded is also any damage which is the result of incorrect or improper use of the product and repair attempts by unqualified persons. The intended use of window and door products is understood to mean the opening and closing of sashes on vertically installed elements. When closing the sash, the counterforce of gaskets must be overcome. Any other kind of use does not correspond to the intended use.

Please note the following points:



The open gap between the sash and the frame can pose a risk of injury through trapping.



When the window is open, there is a risk of falling out - particularly in households with children.



When the window sash is open, there is a risk of injury through the effects of wind and storms.



Avoid additional loads on the sash (e.g. it is not intended to be a coat hanger or stepladder).

1. PRODUCT LIABILITY | WARNINGS



Please take care that no object can get between the sash and the frame and that no object is trapped when closing the window.



Please avoid sashes being pressed against window frames contrary to normal use or in an uncontrolled manner (e.g. due to wind), in such a way that the hardware, the frame materials or other individual parts of the window or door are damaged or destroyed or consequential damage can occur.



In the event of wind and draughts, window and door sashes must be closed and locked.



Open and tilted sashes do not fulfil any requirements in terms of the tightness of joint gaskets, driving rain tightness, sound insulation, thermal insulation and burglary protection.



Closed windows do not meet the requirements for the minimum ventilation necessary for maintaining good health and heating. If windows are used for ventilating rooms, this should be done on a regular basis.



Standard glass does not meet any requirements in terms of increased risk of breakage, burglary protection and fire protection.



Standard glass can break easily. Resulting sharp glass edges and glass splinters pose a risk of injury.



Glazing that prevents falling (e.g. Juliette balcony, ...) which exhibits damage to the edges of the glass (flat chips) or cracks, must be exchanged immediately as the necessary safety requirements can no longer be fulfilled.

1. PRODUCT LIABILITY | WARNINGS



Front entrance doors that have not been locked properly (e.g. locked only via the latch) do not meet the requirements for burglary protection.



Safety-related hardware parts must be checked for tight fitting and wear and tear at least once a year. Tighten the fastening screws or replace parts as required.



Loose glass panes supplied must be stored in a dry place --> Moisture destroys the edge seals.



All window and door elements which are designed to be opened, closed and locked must be operated at least once a month in order to avoid damage due to "dormant wear and tear" (particularly corrosion and stiffness).



During the construction phase, windows and doors are exposed to a variety of mechanical, climatic and chemical stresses, so protect construction elements by covering or masking them and ensure sufficient ventilation to remove the excess moisture.



Please use appropriate adhesive tapes for protecting surfaces. Adhesive tapes must be compatible with timber, plastic and aluminium surfaces. Adhesive tapes must be removed as soon as possible, when they are no longer needed.



Should any stains remain on construction elements despite careful handling, these stains must be removed promptly and completely using mild detergents.



Alkaline leachates from the façade and walls can cause irreversible damage on powder-coated and anodised aluminium surfaces. To avoid this, the window and door frames must be cleaned and preserved in good time.

1. PRODUCT LIABILITY | WARNINGS



It is the responsibility of the customer to proof suitability of any products provided by him for tested burglar proof elements.



Insect excrement, pollen, soot particles, iron dust (abrasion from railway tracks), etc., in combination with rain water and intensive UV radiation, can cause very stubborn deposits on UPVC surfaces, which cannot be removed with regular household cleaners. Therefore, the contact time of such deposits should be kept as short as possible. Frame profiles must be cleaned as soon as possible in the event of such deposits. The affected profiles must be preserved by suitable means.



Sharp edges of functional elements can lead to injury when door and window elements are handled wrongly, especially when someone sits or stands partially or fully under an opened sash.



Please ensure that within concealed hardware the turn restrictor engages in the corner hinge bolt.



If doors have been fitted with turning hinges that are screwed into the sash protrusion, the sash must be protected against "reveal impact" by means of a stopper fitted on site. Otherwise, the forces acting on the turning hinges may cause damage.



Safety components such as turn limiters and stay arms must only be unlocked by qualified personnel in order to adjust or unhinge a sash.



Increased thermal stress and heat build-up on glass can lead to spontaneous glass breakages. Avoid partial shading of glass, which is caused e.g. by external sun protection installations. Heat build-up on the glass results from heat sources (radiators, lights) and, during sunlight, from very dark objects that are too near the glass on the inside or outside. Avoid applying foils and paints to the glass subsequently.

1. PRODUCT LIABILITY | WARNINGS



Panel fillings in sound protection versions have insulating glass built into the core. These panels must not be machined in any way (drilling, cutting) and must be protected from excessive shock and impact forces.



Do not drill into door profiles or designer fillings yourself (e.g. for door spy holes), knockers, etc.). In some cases there is insulating glazing behind the cover layers.

This may result in the destruction of the door sash.



Before using the windows, security-related hardware and hardware accessories must be checked for safe functioning (e.g. lockable window handle, turn stop, rebate and stay arm, turn and opening limiter, etc.) and if necessary must be adjusted by qualified personnel.

Non-observance can lead to material damage or personal injury.



Material surrounding the window or door element which is not waterproof (especially sills or timber floors) must be protected from possible condensation.



Avoid contact between aluminium surfaces and cosmetic products, especially sunscreen products such as sun tan lotion, oil and creams.

This can lead to staining on the surface.



All electrical and electronic components bought in connection with the window and door elements must be recycled at the end of their useful lives and must not be placed into general household waste.



Handles and levers must not be used as carrying aids.

1. PRODUCT LIABILITY | WARNINGS



In particular the moveable parts of bearing components of very frequently operated window and door elements must be lubricated more frequently than once a year!

Failure to observe the lubrication or maintenance intervals can lead to the window or door sash falling and result in material damage or personal injury!



To ensure that driving rain can run off the frame rebate, the weatherstrip on the upper frame is partially replaced by a ventilation seal (also for fixed glazing).



Dark surfaces heat up considerably more than light ones. They can therefore become very hot when exposed to direct sunlight. It is therefore recommended to only touch such elements with caution.

INCORRECT OPERATION

If the window handle is brought into the tilt position when the window is open, the sash will come loose from the top locking mechanism. In order to avoid injury or damage, please proceed as follows:



Keep the window handle in the tilt position and press the sash onto the frame at the stay arm side and turn the handle (90°) into the turn position.



Then close the window and turn the window handle into the closed position (turn 90°). Now you can tilt or open the window sash again without any problems.



SPECIAL WARNINGS for timber-aluminium windows.



Please protect timber/aluminium elements from humidity, rain and snow during construction work. There are openings between the aluminium and timber profiles to equalise the vapour pressure of the profiles.

Please protect these joints from humidity until the building connection is established.



Moisture, mortar, concrete and plastering materials cause permanent discolouration, especially with oak and larch. This is caused by a chemical reaction with the wood components (tannic acid). Protect your wooden surfaces during the construction phase by masking them with suitable materials.



Please avoid the formation of excessive humidity (max. 50 % at 20 °C). This leads to damage, such as the swelling of timber parts, damage to painted surfaces (door panels), deformation of components, corrosion damage to hardware parts, formation of mould and an unhealthy living environment. The effects of excessive humidity must also be prevented in certain construction phases (interior plastering or screed work).



What causes excessive humidity?

Dense construction, use of living spaces and the resulting insufficient fresh air supply or inadequately adjusted domestic ventilation systems.

What causes condensation?

Air can store different amounts of water at different temperatures. In a saturated state (at 100 % relative humidity) the stored amount of water in 1m³ is 17.3 g at an air temperature of 20 °C.

Timber absorbs humidity from the room air and also releases it again.

Therefore a high air humidity leads to a high timber moisture content.

An excessive timber moisture content over a longer period of time leads to expansion (swelling of the timber scantlings) and causes damage to the product.



In the picture you can clearly see condensation on the inside pane in the lower mullion area of a lift-sliding door.

The cause is stagnant, cool room air in the lower corner area. Insufficient temperatures in the threshold area reduce air circulation. Condensation can form and mould can also develop as a result.

1. PRODUCT LIABILITY | WARNINGS



Signs of excessive humidity are:

Gaskets are no longer tight against the product, joints larger than 1 mm become visible; in fixed elements - heavy warpage of fixed glazing beads, mould, condensation on room side on glass pane mostly in lower area or panes are misted up over a longer period of time.

If condensation is forming in the flying mullion area on the centre gasket or rebate, this is also a sign of excessive humidity in the room.

Severe damage to windows can be expected if water drips from the panes and window sashes regularly or rust becomes visible on hardware parts.



Condensation on the outer pane (especially in winter) and in the outer window rebate are normal and permissible. This does not lead to damage on timber/aluminium windows.



Detection of excessive air/timber humidity:

In case of doubt, timber moisture content and room humidity must be determined using suitable humidity measuring devices. The humidity must be measured in the top reveal of the window (e.g. with a hook on the window handle). If the relative humidity at approx. 20°C over a longer period of time is more than 70%, it will lead to irreparable damage to timber/aluminium windows.



Parameters for the moisture content of timber:

13% ±2 Delivery status Lannach factory with 13% ±2.

15-17% Critical level; measures for drying should be initiated (ventilation, careful heating,...).

22% If the timber moisture content is 22% and more over a longer period of time, expect permanent and irreparable damage to the timber/aluminium window.

The timber moisture content can be reduced again by slowly drying out the timber.

1. PRODUCT LIABILITY | WARNINGS



Ensure free air circulation in the room all around your timber/aluminium windows and window soffit. Windows and panels must not be covered or obstructed by other components (e.g. bath tub, kitchen units or furniture in front of panels, ...).



Possible measures in case of increased water entry into the building: Render (especially loam rendering) and floating screed, ... bring huge amounts of water into the room air. Do not keep windows completely shut during the drying phase of render and screed!

Check with your Internorm distribution partner about possible measures before using floating screeds and loam render. To protect your windows, you could e.g. unhinge your window sashes until the render and screed has dried and replace the sash with timber sheets.



Air permeability of Internorm timber/aluminium windows:

Your windows are designed to be airtight in accordance with European standards. The class for driving rain tightness, air tightness and further requirements obtained through independent tests is documented in the CE declaration and the value declaration for your windows.

Air tightness e.g. specifies that in the highest achievable class 4, the air intake may be a maximum of 3 m³/(h*m²).


2. OPERATION

2.1. WINDOWS AND WINDOW SYSTEM DOORS

Turn-tilt version

The sash can be turned with the handle positioned horizontally and tilted with the handle positioned vertically.

Tilt window




Open window, turn position

Close and lock window

Turn version

A vertically upward handle position is not possible.




Open window, turn position

Close and lock window

Tilt version (KGO)

The handle is mounted in the centre at the top.

A vertically upward handle position is not possible.



Close and lock window


Open window, tilt position

Tilt version (KG)

The sash can be tilted by positioning the handle vertically and horizontally.

For technical reasons, the handle can only be turned horizontally to tilt sashes of certain sizes.

Tilt window



Tilt window

Close and lock window

2. OPERATION

Fanlight version (KAZ)

The sash is operated via a pull rod. When the pull rod is pressed down, the sash is brought into the tilt position.



Close and lock window

Tilt window

Fanlight version (KAK)

The sash is operated via a crank handle. To open the sash, the crank handle is taken out of the wall bracket, folded (as shown in the drawing) and positioned into the tilt position by turning the crank handle.



Folded crank handle for opening and closing

Lockable turn/turn-tilt door

The door can be turned by positioning the handle horizontally and tilted by positioning the handle vertically. In this version, the drive stroke is locked by the cylinder, i.e. the handle can no longer be operated. The door can be locked in the closing as well as in the tilt position.

Tilt door




Open door, turn position

Close and lock door

Multi-point locking turn door

By pressing the lever handle down, the latch is retracted and the door can be opened. The lever handle springs back. To lock the door, the lever handle must be pressed upwards by 45° - all locking elements lock and the profile cylinder can be locked. To open the door, the cylinder must be operated first and only then can the lever handle be pressed down and the door opened.

Press up to lock door




Press down to open door

2. OPERATION

Dead bolt lock turn door


By pushing the lever handle down or operating the cylinder (in the opposite direction to locking), the latch is retracted and the door can be opened. The handle springs back. The door is locked by a bolt, which is operated via the locking cylinder (extending bolt). The handle can also be operated when the lock is locked.



Press down, open door

Side entrance door

By pressing the lever handle down or operating the cylinder (in the opposite direction to locking), the latch is retracted and the door can be opened. The handle springs back. The door is locked via a bolt and locking pins, which are operated via the locking cylinder (two full turns)



Press down, open door

3-sash window without mullion (model 50)

Adhere to opening sequence to avoid damage to sashes.

To open: first both end sashes, then centre sash!

To close: first centre sash, then both end sashes!

Flying mullion sash drive

The flying mullion lever is folded flush in the closed position.

Release flying mullion lever by pressing blue button.



Flying mullion lever unlocked




Press lever down to open sash.




2. OPERATION

Attachment sash of window with integrated blinds


The locks of the attachment sash are only accessible when the window sash is open. Locks are positioned on the inside of the drive between the window sash and the attachment sash. Pull out the locking latches by 90° and open the attachment sash. Please ensure that all locking latches have been locked into place before locking the sash again.

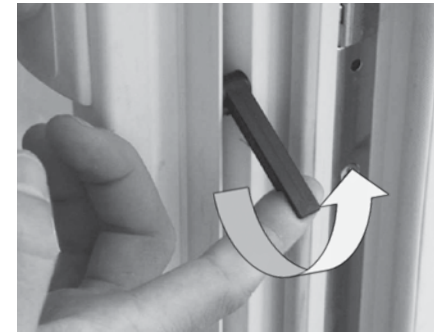


By closing the vent slots with a grid you can prevent insect ingress during summer.

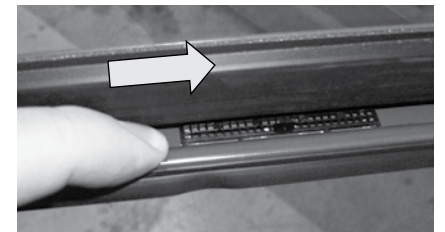

Open the vents again in winter to ensure good ventilation. This should help prevent misting up and condensation.

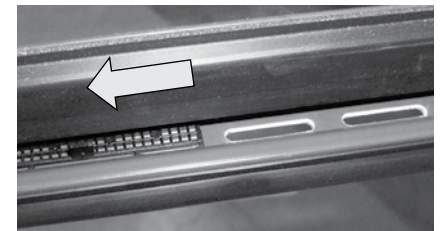

Closing the vents with the gaskets can ensure increased sound reduction (HV 450).

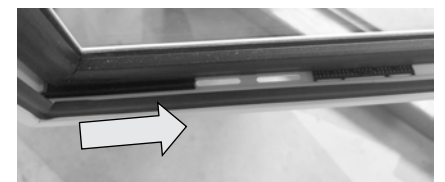


2. OPERATION

2.2. SLIDING ELEMENTS


Parallel sliding window/door

Turn the handle horizontal for the sliding function, then position the sash parallel by pulling the handle and sliding to the side. To close, push the sash so far until it swerves back into the locking position again.

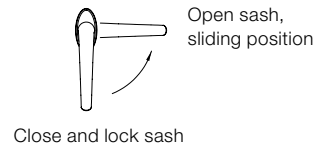


Lift-sliding door

Turn the handle right down to open and slide the sash. The sash can be lowered either into the locked position or any other open position. It is then secured against sliding.

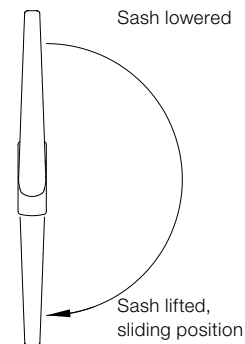

Turn handle downwards, sash is lifted:
= sliding position

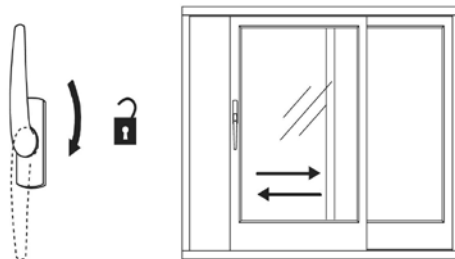

2. OPERATION



Always turn the handle completely downwards (6 o'clock position) to open and slide the sash, otherwise automatic unintentional lowering of the sash might occur. This raises a potential risk of locking oneself out (incorrect operation)!




Only lower the sliding sash when not in operation!
If the sash is lowered while sliding, damage can occur to the bottom sash gaskets: incorrect operation!



Carry out the following checks regularly (at least every 2 years):

- Correct position of visible gaskets.
- All covers present and free from damage.
- Dead bolt optimally adjusted (see adjustments).
- Stopper buffer tightly fitted.
- Spring contacts move smoothly and free from dirt and corrosion. (only with Comfort Drive)

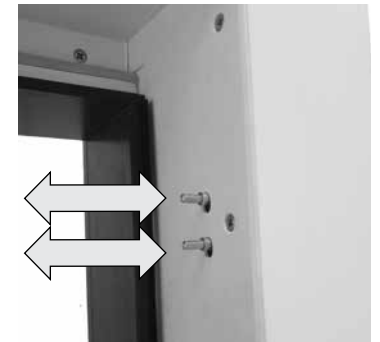

2. OPERATION

Lift-sliding door with Comfort Drive:



The lift-sliding door must not be used as a fire, smoke or escape door.



The drive is connected via a cable that exits the frame to 230V AC and must be installed by licensed specialists. Otherwise - danger to life!



Non-observance of working steps can lead to the destruction of the drive. Incorrect handling endangers the material. Do not allow liquid to enter inside the device! Keep the running rail clear of dirt and any objects.



Danger of crushing and trapping! Risk assessment is required at the installation site in accordance with machinery directive 2006/42/EC to prevent misuse. Apply protective measures in accordance with EN 60335-2-103/2016-05.



Danger of crushing and trapping! The drive opens and closes windows automatically. It stops via a load cutoff. The compression force is nevertheless still high enough to crush fingers if you are not careful. Never reach into the passing area while the drive is operating and never reach into the drive!



The lift-sliding door can be used by children 8 years old and above as well as by persons with reduced physical, sensory or mental capabilities or with lack of experience or knowledge, if supervised or instructed how to safely use the device and understand the dangers resulting from it. Children must not play with the lift-sliding door. Ensure that no person or object is in the movement area of the lift-sliding door and that the door sash can be seen when opening and closing. Cleaning and user maintenance must only be carried out by persons who have been instructed.



Check all functions through a test-run after installation and after each change to equipment.

2. OPERATION



Observe the regular inspections according to Page 19



When using the ekey dLine fingerprint scanner, the 'Local Mode' should be used (ekey bionyx App) for security reasons. In this mode, the time control is disabled, making it virtually impossible to accidentally lock yourself out. Furthermore, the smart home connectivity, the use of the voice assistant and remote opening are disabled. Unintentional opening and closing from a distance without a direct view of the lift & slide sash is thereby largely avoided.



Only operate the lift & slide door with the Comfort Drive WIFI box when you have a direct view of the lift & slide sash and make sure that no persons or objects are within the operational area of the lift & slide door.



The WIFI box provides the option of operating and configuring the lift & slide door via smartphone or tablet. The device is connected directly to the WIFI box or via an on-site WIFI router with prior WPS login. To set up the Comfort Drive WIFI box (Hautau WIFI box), you need the Hautau app "Config Tool" and optionally the app of the smart home system you use. You can find further information about which smart home manufacturers are compatible with Internorm online under I-tec Connect.

2. OPERATION

Basic functions:

a) To open the door, the button (or optional fingerprint ekey dLine, ekey bionyx app, Hautau Config Tool app, etc.) is pressed briefly (approx. 0.5s). The door opens completely. If the door is moving, the next press of a button always results in STOP. When stopping, the system saves the last direction of movement.





The response time for an optional fingerprint (relay switching time) is set to 3s as a default and cannot be changed. (see ekey bionyx app)

- b) If the door is standing and the button is operated, the door moves in the opposite direction to the last recorded movement.
- c) Faults are reported by a flash code (1 sec. on – 1 sec off) on the LED (permanently). Every function is stopped when a fault occurs; this means that the door will stop. The next press of the button is recognised as a STOP button and the error status is reset. If the fault persists, the door cannot be moved electrically.
- d) The LED is unlit when at rest.
- e) When the door is moving, the LED is illuminated constantly.
- f) After the door has finished moving, the LED goes out.
- g) Random pressing in quick succession: commands are ignored, to protect the element.


Button with LED light

Legend:




2. OPERATION

To open the sash:

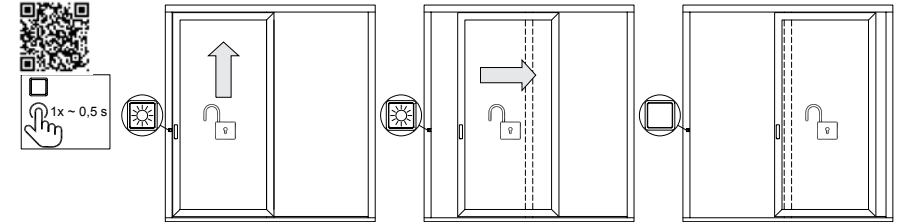

To close the sash:

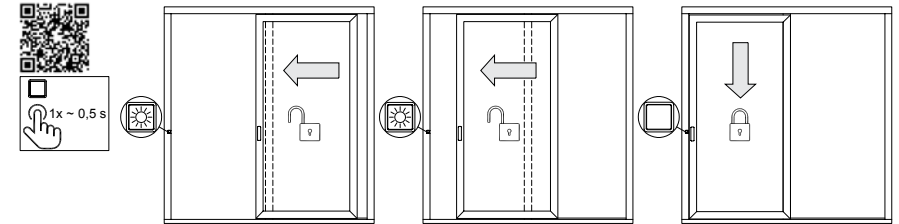

Extended functions:

Child safety lock:

Press and hold the button for 10 to max. 20 seconds to switch the child safety lock on or off. After 10 seconds, the LED lights up for 3 seconds. Release the button.

After activation of the child safety lock, no operations are available. If the button is pressed for 0.5 seconds, the LED double-flashes 3x (child safety lock active). This indicates that the lock is active.

Operating the ekey dLine operating unit:

If there is a stored fingerprint, the lift & slide door can be operated via the ekey despite the childproof lock being activated (safety function to prevent accidental lock out). The door can also be stopped when the fingerprint is activated. The childproof lock on the button remains active.





An active child safety lock is automatically deactivated in the following scenarios:



- Power cut
- Software reset
- Factory reset

2. OPERATION

To activate the child safety lock:

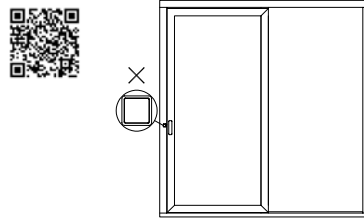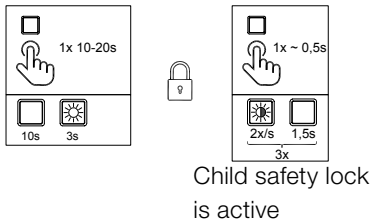

To deactivate the child safety lock:

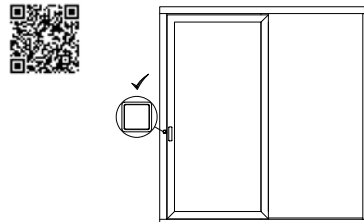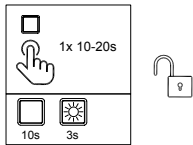

Software reset:

Press and hold the button for 20 to max. 30 seconds to trigger the software reset. After 10 seconds, the LED illuminates for 3 seconds. Keep the button pressed! After 20 seconds, the LED illuminates for 3 seconds. Now release the button.

There are two types of software reset operation:

1. Door closed and locked:

A software reset is carried out, e.g. errors are deleted, but the door still recognises all its parameters. The door remains locked and is ready immediately.



2. OPERATION



2. Door open:

The LED flashes about 3x per second constantly. When the button is pressed for about 0.5 seconds, the door slowly opens to about 100 mm. For this function, the door has to be at least 200 mm before the maximum open position. If this measurement is not reached, the sash needs to be closed manually before reset by about 200 mm.

After the button is pressed once more, the door slowly closes and locks. The door is ready and the LED goes out.



**Do not interfere under any circumstances during the software reset!
Safety devices are deactivated!**

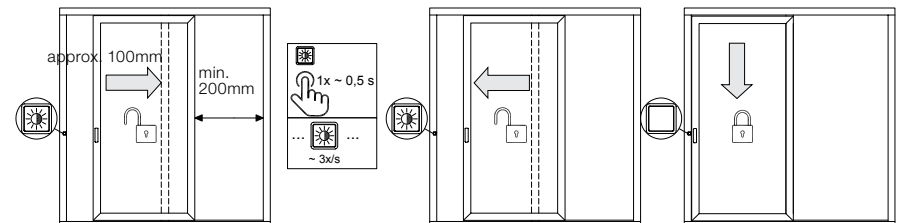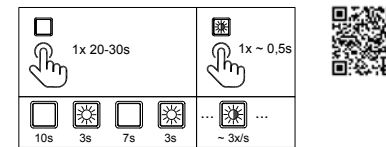

2. OPERATION

Factory reset:

Pressing and holding the button for more than 30 seconds triggers a factory reset.
 After 10 seconds, the LED illuminates for 3 seconds. Keep the button pressed!
 After 20 seconds, the LED illuminates for 3 seconds. Keep the button pressed!
 After 30 seconds, the LED illuminates for 3 seconds. Now release the button.

There are two types of factory reset:

1. Door closed and locked:



The LED flashes about 3x a second constantly. When the button is pressed for about 0.5 seconds, the door is unlocked and the factory reset is carried out automatically (without any further press of a button). At the end of the factory reset, the door remains in a locked position and returns to the normal operating function, the LED goes out.



Do not interfere under any circumstances during a factory reset!

Safety devices are deactivated!

For an HS330, when opening, place a cushioning insert, e.g. 5 mm corrugated cardboard, before the end stop to protect the surface between the sash and the frame.

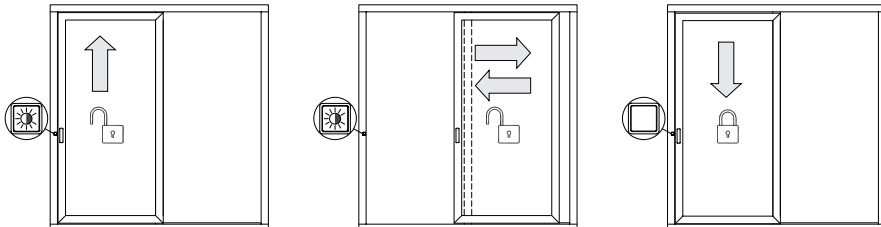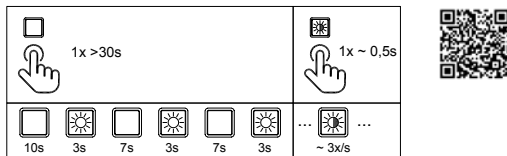

2. OPERATION

2. Door open:



The LED flashes about 3x a second constantly. When the button is pressed for about 0.5 seconds, the door slowly opens to about 100 mm. For this function, the door must be at least 200 mm before the maximum open position. If this measurement is not reached, the sash must be closed manually by about 200 mm before the reset.

After the button is pressed again, the door slowly closes automatically (without any further press of a button), locks and carries out the factory reset as described above.



Do not interfere under any circumstances for the duration of the factory reset! Safety devices are deactivated!

For an HS330, when opening, place a cushioning insert, e.g. 5 mm corrugated cardboard, before the end stop to protect the surface between the sash and the frame.

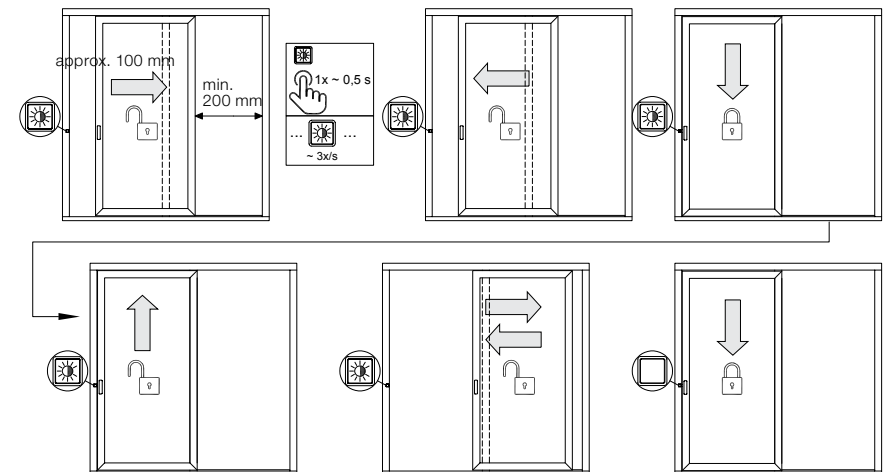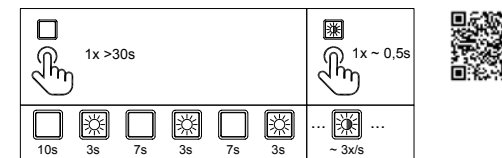

2. OPERATION

Fault messages:

Power cut:



An active child safety lock is automatically deactivated by a power cut, software reset or factory reset!

1. Door closed and locked:

The door remains locked and is ready immediately after power is restored.

2. Door open:

After power is restored, the LED flashes constantly about 3x a second. When the button is pressed for about 0.5 seconds, the door slowly opens to about 100 mm. For this function, the door has to be at least 200 mm before the maximum open position. If this measurement is not reached, the sash needs to be closed manually by about 200 mm before the reset.

After the button is pressed again, the door slowly closes and locks. The door is ready and the LED goes out.



Power cut:

After a power cut (hitting an obstacle or after a mechanical defect), the door goes into fault mode. A fault is reported by a permanent LED flash code (1 second on - 1 second off). All functions are stopped when a fault occurs, this means the door stops and moves about 100mm in the opposite direction. The next press of a button is recognised as a STOP button and the fault state is reset. If the fault persists, the door cannot be moved electrically. In this case, a software reset can be carried out or subsequently a factory reset. If the fault still persists, lock the door manually and contact customer service.




2. OPERATION

Manual unlocking/locking during power cut:



In the event of a power failure, the sliding sash can be raised/lowered with a cog, guide sleeve and box spanner. This enables unlocking/locking in the closed/open position.

1. Disconnect the power supply from the mains, switch off the circuit breaker

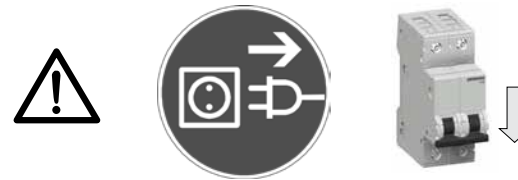


CD_Set emergency unlocking
Part No.: 24486

Wiha bit holder 388 1/4"-150 mm
Part No.: 24477

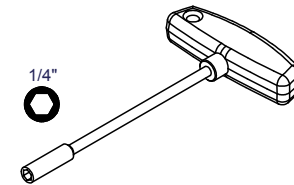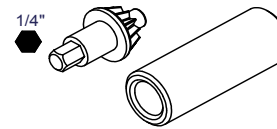


2. Remove the cover for emergency unlocking
(do not damage the surface!)

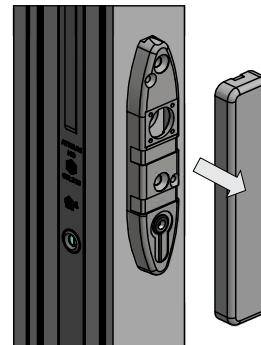


2. OPERATION


3. Attach the cog and guide sleeve to the box spanner.

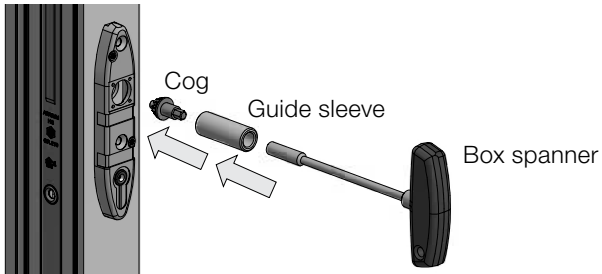

4. Insert cog, guide sleeve and box spanner into the drilled handle hole. The cog must fully engage with the lift drive! This can be ensured by wiggling it slightly (right/left turn). As soon as you feel a resistance while turning and hear a rumbling sound, the emergency unlocking engages.

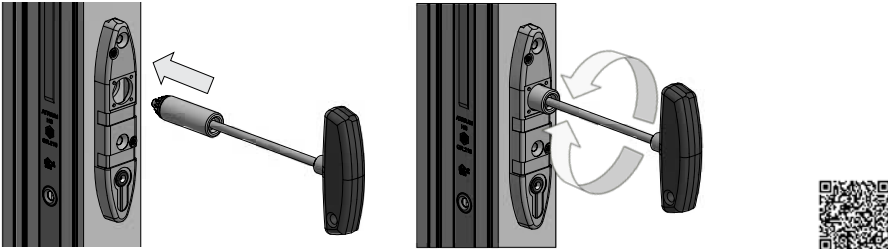


Do not use a cordless screwdriver

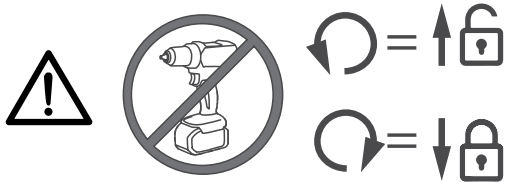


2. OPERATION

5. Use light pressure on the emergency unlocking in the direction of the sash and use max. 15 full turns to **lift the sash (turn counterclockwise)** or **lower it (turn clockwise)**. This applies to both left and right sliding doors. If the cog "skips", increase the pressure in the direction of the sash.

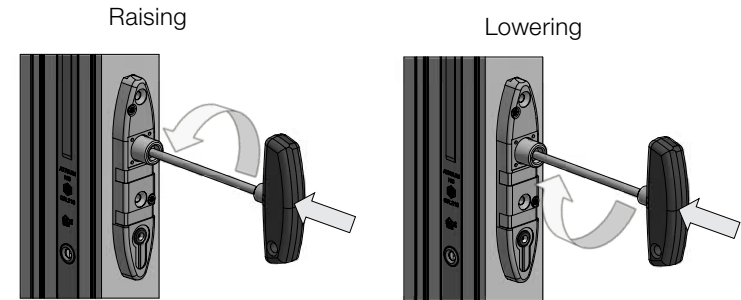


6. Remove the cog, guide sleeve and box spanner and store them for possible later use.

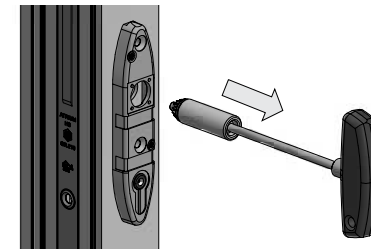

After emergency unlocking, it is imperative to remove the cog and guide sleeve from the sliding sash! Otherwise, the lift drive or the emergency unlocking may be damaged.

7. Re-attach the cover for emergency unlocking.

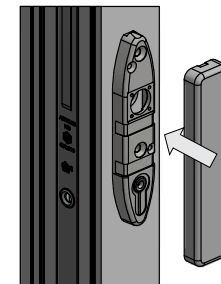

2. OPERATION

2.3. FRONT ENTRANCE DOORS

Internorm front entrance doors are available with a variety of lock types, which differ in their operational capabilities.

Below an overview of basic functions of the locking systems.

Lock types for aluminium front entrance doors:

	Locking points	Closing process	Opening process	Evaluations	Day operation *)
MVB	Main bolt + 2 bolts	manual mechanical	manual mechanical	no	-
MV	Main bolt + 2 bolts-hook bolts	manual mechanical	manual mechanical	no	-
MV with TSH	Main bolt + 2 bolts-hook bolts	manual mechanical	manual mechanical	no	-
MVC	Main bolt + 2 bolts-hook bolts	manual mechanical	manual mechanical/ inside lever	no	-
MVAM	Main bolt + 2 bolts-hook bolts	automatic mechanical	manual mechanical/ inside lever	no	mechanical
EE	Main bolt + 2 bolts-hook bolts	automatic mechanical	automatic electrical / inside lever	no	electrical via permanent signal
EVE	Main bolt + 2 bolts-hook bolts	automatic electrical	automatic electrical	yes	electrical
EVC	Main bolt + 2 bolts-hook bolts	automatic electrical	automatic electrical / inside lever	yes	electrical
VEV	3 individual mushroom cams	automatic electrical	automatic electrical	yes	electrical
FRS	Main bolt	manual mechanical	manual mechanical	no	-

*) Daytime operation: no automatic locking when closing (switchable)



Emergency door locks acc. to EN179 and EN1125:

User manuals for emergency door locks are not included in this booklet; these will be described in separate special instructions!

2. OPERATION

Lock types for timber/aluminium front entrance doors:

	Locking points	Closing process	Opening process	Evaluations	Day operation *)
MV	Main bolt + 2 bolts-hook bolts	manual mechanical	manual mechanical	no	-
MV with TSH	Main bolt + 2 bolts-hook bolts	manual mechanical	manual mechanical	no	-
MVAM	Main bolt + 2 bolts-hook bolts	automatic mechanical	manual mechanical/ inside lever	no	mechanical
EE	Main bolt + 2 bolts-hook bolts	automatic mechanical	automatic electrical / inside lever	no	electrical via permanent signal
EVE	Main bolt + 2 bolts-hook bolts	automatic electrical	automatic electrical	yes	electrical
EVC	Main bolt + 2 bolts-hook bolts	automatic electrical	automatic electrical / inside lever	yes	electrical

*) Daytime operation: no automatic locking when closing (switchable)

2. OPERATION



Only a locked door will provide security!

Locking, unlocking and opening – manual



Locking the door manually

Full turn (s) (1 or 2 turns) of the key in locking direction
→ all locking elements engage.



Unlocking the door manually (from a locked state)

Full turn(s) (1 or 2 turns) of the key in the opposite direction to locking
→ all locking elements retract.



Opening the door – lever handle (from an unlocked state)

Lever handle present – push the lever handle → the latch retracts, the door opens.



Opening the door – static handle (from an unlocked state)

No lever handle present – turn the key in the opposite direction to the locking direction for a full turn. This retracts the latch. Push the door sash in the opposite direction to the opening direction
→ This releases the load on the latch, the door opens.

2. OPERATION

FRS (Dead bolt lock)

Type: Mortise lock with latch and bolt

Locking element:

1 main bolt

Locking, unlocking:

1 full turn of the key

(Detailed description page 34)

Latch

Main dead bolt



2. OPERATION

MVB (Multi-point locking “bolt”– manual)

Type: 3-point locking

Locking elements:

1 main dead bolt, 2 bolts

Locking, unlocking:

2 full turns of the key

(Detailed description page 34)



2. OPERATION

MV (Multi-point locking – manual)

Type: 5-point locking

Locking elements:

1 main dead bolt, 2 bolts, 2 hook locks

Locking, unlocking:

2 full turns of the key

(Detailed description page 34)



2. OPERATION

MVC (multi-point locking - manual - comfort opening)

Type: 5-point lock

Locking elements:

1 main dead bolt, 2 hook locks, 2 trigger bolts

Locking:

2 turns of the key

(Detailed description page 34)

Unlocking:

Outside: manually with key

Inside: manually with lever



The door does not comply with EN179
(Emergency exit function)



2. OPERATION

MVAM (Multi-point locking – automatic-mechanical)

Type: 5-point locking

Locking elements:

1 main dead bolt, 2 hook locks, 2 trigger bolts

Locking:

Automatic mechanical after closing of the door

(2 hook bolts and 2 trigger bolts engage)

Unlocking:

Outside: manually via the key

Inside: manually via the lever handle

Additional locking:

The main dead bolt can additionally be engaged via the key in the locked state

→ additional security

In this position the inside lever is blocked.



Burglar resistance class RC2 will only be achieved by activating additional locking!



Trigger bolt



2. OPERATION

Day operation

The multi-point locking can be put into day operation via a slider on the main bolt. Day operation prevents that bolts/hook bolts engaging when the door sash is closed.

The door is now only kept closed via the lock latch.

This enables use of an electrical door opener (ETÖ) or a mechanical day latch (MTOE).



To change the switching position - day operation active or not in use: retract latch at the same time via the lever or cylinder.

Unless the latch is retracted simultaneously, the switching position cannot be changed and the mechanism may be damaged!

Slider
on main bolt



Check on the opened door sash that the desired switching position - normal or day operation - is set correctly, before you close the door sash; otherwise you could lock yourself out!

Normal operation:
Trigger bolts protrude by
about 10mm



Day operation:
Trigger bolts are almost completely
retracted (to about 2mm)



Trigger bolts

2. OPERATION



To achieve mechanical permanent opening: imperative to activate day unlocking on a frame-sided ETÖ / MTOE.
(ETÖ or MTOE are optional accessory parts)




Slider on electric door opener (ETÖ)
or mechanical day latch (MTOE)



Day operation does not fulfil requirements for burglary protection!



Please check that both red transport protection devices have been removed from the closing beads on the side of the frame.
The doors **CANNOT** be locked unless these transport protection devices have been removed!

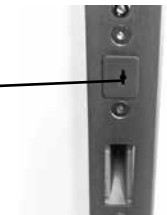

2. OPERATION

EE (Multi-point locking – semi-motorised)

Type: 5-point locking

Locking elements:

1 main dead bolt, 2 hook locks, 2 trigger bolts

Locking:

Automatic-mechanical after closing of door
(2 hook locks and 2 trigger bolts engage)

Unlocking:

Outside: via the access control system
(fingerprint, keypad, ...)

Inside: manually via lever handle

Additional locking:


The main dead bolt can additionally be engaged via the key in the locked state

→ additional security

In this position the inside lever and access control system are blocked.



Burglar resistance class RC2 will only be achieved by activating additional locking!

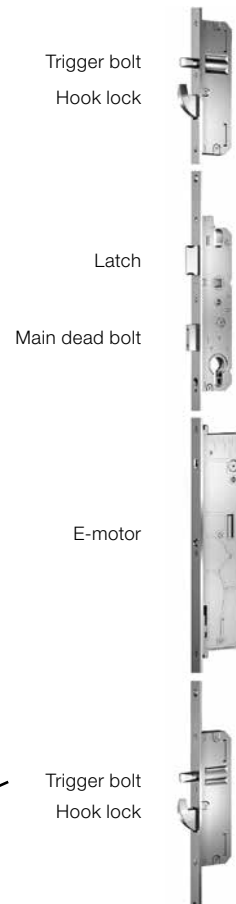

2. OPERATION

Day operation

In this state, the automatic release of locking elements is prevented, thus ensuring free passage.

All locking elements are retracted, including the latch.

Day operation can be realised in 2 ways:

Var. 1: via a **permanent opening signal** on terminal 4 (e.g.: external switch - switching can be realised via a specialist retailer)

Var. 2: via **stainless steel button in the door sash** (optional accessories)

Day operation on: 3x 0.5 sec. (short press) + 1x 2 sec. (long press) - within 5 sec.

Day operation off: 1x 2 sec. (long press)

After approx. 7 sec., the humming tone of the e-motor will stop automatically.

The door sash is only kept in position via an additional latch or door closer.

Please note: energy consumption in this position is very low: about 80 mA

2. OPERATION

Please note:



A door which is only kept in position via the additional latch or door closer is NOT considered locked! Only a locked door provides security!



DO NOT leave keys in the locks.



**Do not use the lever handle during the motorised unlocking process.
Danger of damage to the lock!**



**Please check that both red transport protection devices have been removed from the closing beads on the side of the frame.
The doors CANNOT be locked unless these transport protection devices have been removed!**



**Operation of day/night switching via a timer is not permitted!
Reason: when switching from day operation to night operation, the door would not lock automatically, as the locking mechanism is only triggered mechanically with the first manual operation (door open - closed).**

2. OPERATION

EVE and EVC (multi-point locking - fully motorised)

Type: 5-point locking

Locking elements:

1 main dead bolt - 2 bolts - 2 hook locks

Locking: automatically by electric motor after the door is closed (all 5 locking elements)

Unlocking:

Outside: via the access control system (fingerprint, keypad, ...)

All locking elements and the latch are retracted for max. 7 seconds. If the door is not opened during this period, it is locked automatically.

Inside: EVE: via electric push button
EVC: additionally possible from a locked state via the inside lever handle (comfort)

Emergency operation is possible using the key!

Day operation - can be switched mechanically and electrically:

In this position, no automatic locking takes place. The door is only kept closed via the lock latch.

- This enables use of an electrical door opener (ETÖ) or a mechanical day latch (MTOE).
- Description of operation for switching, see Chapter 3.4 Adjustments and adjustment possibilities.

Bolt
Hook lock

Latch

Main dead bolt

E-motor

Bolt
Hook lock



2. OPERATION

Please note:



A door which is only held in place via the lock latch, is NOT considered to be locked. Only locked doors provide security!



DO NOT leave keys in the lock.



**Do not use lever during the motorised locking or unlocking process.
Danger of damage to the lock!**

2. OPERATION

VEV (fully-electric locking)

(Lock manufacturer's product name: **INSTINCT by MACO**)



Before you put the door into operation, be sure to read the lock manufacturer's "User manual and maintenance instructions" as it includes important information for end users.

The manual is available via the following link:



<https://www.maco.eu/en-GB/Products/Doors/Instinct/Downloads>

Type: 3 individual locking points

Locking elements:

3 hook lock/3 locking elements with locking pins

Locking: Takes place automatically through an electromotive mechanism after the door closes

Unlocking:

Outside – via an access-control system:

- "INSTINCT by MACO" app
- Fingerprint ekey dLine (optional)
- Access-control system operated by the customer

Inside:

- Using a push button (optional) – short press (2 seconds)
- Using the "INSTINCT by MACO" app

2. OPERATION

INSTINCT by MACO app:



To use the app, Bluetooth must be activated on your smartphone and the door must be ready for operation (proper electrical connection)



Only a qualified electrician may carry out the electric installation.

When the door is delivered, it will be in construction mode. Anyone can open the door, even without access authorisation. All you need to do is download the “INSTINCT by MACO” app.



<https://www.maco.eu/assets/InstinctAppApple>



<https://www.maco.eu/assets/InstinctAppGoogle>

2. OPERATION

Personalising the door

Download the INSTINCT by MACO app on your device (smartphone, tablet).

You can find the corresponding QR code on the previous page.

The INSTINCT Admin Card is included in the accessories kit. You can use it to programme the 1st administrator.

To do so, you will need to scan the QR code below the scratch field.

The app is easy to use and largely self-explanatory.

After programming the 1st administrator, construction mode is deactivated.



Make sure you only accept an Admin Card with an intact scratch area. Store the Admin Card safely. You can use it to restore the door to factory settings and reconfigure it.

With the app, you can:

- **open the door** – also available as a widget
- set a number of **operation modes** (daytime operation, child lock, sleep mode...)
- view the **event log** (up to 1,000 events)
- manage **permissions**

As a special feature, an administrator can send a **one-time key** from anywhere via WhatsApp or SMS.

There are many options.

The most important information is described in the lock manufacturer’s download area, and can be found in “INSTINCT by MACO - Quick Start Guide”.

Here is the link to the download area mentioned above:



<https://www.maco.eu/en-GB/Products/Doors/Instinct/Downloads>

2. OPERATION



We recommend that you check regularly, whether new firmware is available. This allows you to activate upgrades or new modes.



As soon as the door is disconnected from the power supply, it is no longer possible to open it when locked. Should there be a power outage, the UPS, included with the delivery, will continue to power the door for at least 12 hours. (Time calculated for operation without a fingerprint scanner, illuminated push buttons or another user connected to the gateway)



It is strongly recommended to programme at least a second administrator.



There are two options for activating daytime operation (door remains unlocked):

1. Using the "INSTINCT by MACO" app
2. By pressing the interior push button (if present) for more than 2 seconds. Pressing the button again for more than 2 seconds will deactivate daytime mode.



An integrated module provides acoustic signalling for the various procedures and modes (e.g. closing, daytime mode, disruption...) Can be deactivated in the app when in "Sleep mode", if desired.



You can programme a maximum of 20 users.

2. OPERATION


ACCESSORIES (OPTIONAL)

Integrated door block TSH:

1. Door limiter – integrated into striking bead



2. Bolt – integrated into MV

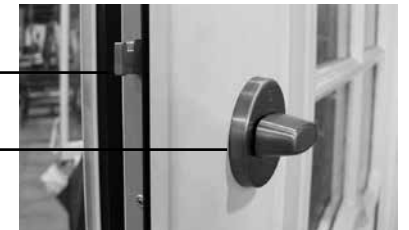

3. Turn knob – on inside of door sash

To open the door from outside when the TSH (integrated door block) is activated:

1. When the door is locked, 2 full turns of the key in the opposite direction to locking.
2. One full turn of the key in the locking direction
→ the bolt of the TSH retracts
3. One full turn of the key in the opposite direction to locking.
The lock latch is retracted and the door can be opened

To activate/deactivate the TSH door block from the inside:

Use the turn knob on the inside of the door sash. (approx. 90° turn)

Door limiter in operation



2. OPERATION

Electric door opener (ETÖ)

Only for doors with a static handle (no lever handle) on the outside.

Normal position: The door is kept closed via the latch. When released by the electric signal, the door can be opened by simply pushing against it. (only if the door is not locked)

Day unlocking: The door can be pushed open any time (only if the door is not locked).

ETOE: The door can only be opened during the electrical contact time.

ETOA: The door stays open after contact has been made once, until the door sash is opened once.

Technical data:

10- 24 Volt

Direct and alternating current (DC/AC)

Mechanical day unlocking

The ETÖ is suitable for 100% power on between 10V and 13V DC (direct current).



Slider for switching between normal position and day unlocking

2. OPERATION



A door that is only held in place via the lock latch, is NOT considered to be locked. Only locked doors provide security!



Only professional personnel are allowed to install electrical connections!



Emergency doors feature different electric door openers.



If the door is only kept on the latch (ETÖ operation), always check after closing of the door sash that the door sash is properly engaged (cannot be opened without the lever handle or key).

2. OPERATION

Mechanical day latch (MTOE)

Only for doors with a static handle (no lever) on the outside

Day latch activated:
The door can be opened by simply pushing against it if it is not locked.

Activating slider



Day latch not activated:
The door holds via the lock latch if it is not locked.

Please note:

The door should be equipped with an additional catch or door closer, as the pressure of the gasket could push the door open of its own accord!



A door which is only held in place via the lock latch, is NOT considered to be locked. Only locked doors provide security!




If the door is only kept on the latch (MTOE operation), always check after closing the door sash that the door sash is properly engaged (cannot be opened without a lever handle or key).

2. OPERATION

Shoot bolts (only with 2-sash elements)

Locking the slave sash: via shoot bolts which are positioned at the top and bottom in the slave sash rebate.

Opening and closing is done via the lever on the shoot bolt.

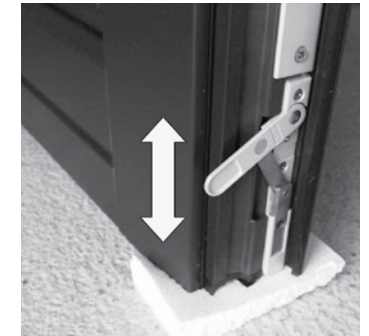

Operating instructions for any existing **access control** (fingerprint scanner, keypad...) are not part of this guide, but are described in their own special instructions.

These instructions are included with the delivery of the door. The latest version can also be found on the ekey homepage in the download centre www.ekey.net/downloadcenter.

Types used:

Fingerprint scanner dLine in the door sash:

ekey dLine fingerprint scanner
ekey dLine controller

Fingerprint scanner dLine in handle bar:

ekey dLine fingerprint scanner
ekey dLine controller

Keypad in the door sash:

ekey home – Keypad Integra control unit micro 1

Please note that the access control is already wired to the motorised lock and only the Internorm circuit diagrams included in the delivery are valid.

2. OPERATION

I-tec Open

I-tec Open is a convenient daytime function that allows you to open the door without a key.

A major advantage is that the door hangs securely in the latch and is not, for example, unintentionally opened by the wind.



when the I-tec Open module is activated, the door is considered unlocked
- no burglary protection at all!

Function:

A concealed electronic module is installed and wired into the frame profile. A button in the frame (lock side) at a height of approximately 850 mm activates or deactivates the module. The status is indicated by a LED light ring.

LED lights up = active



When the module is activated, the opening pulse is triggered by a **double knock** on the door sash. Depending on the version, the module sends the signal to the electric door opener or to the motor lock and the door can be opened.

a) I-tec Open controls the electric door opener:

If you wish to use the I-tec Open for day operation:



- a mechanical multi-point lock MV or MVC must not be locked.
- a mechanic automatic multi-point lock MVAM must be set to daytime mode

2. OPERATION

b) I-tec Open controls a motor lock:

If a door is equipped with an EVE or EVC motor lock, the opening signal of the I-tec Open module is sent to the motor lock.
(even if the door is additionally equipped with an electric door opener)



When I-tec Open day mode is activated:

The motor lock and any electric door openers/mechanical day latches must be in night mode/normal position.

2.4. SUN AND INSECT PROTECTION

Aluminium window shutter



Ensure that open window shutter sashes are correctly fixed in the wall holders. Close the window shutters during storms (wind speeds over 35 mph). Otherwise, resulting stresses can damage or destroy hardware parts. This can lead to subsequent damage.



To open and close the shutter

In order to **open**, engage the latch of the closing lever and turn the lever. Then turn the shutter open until it engages in the wall shutter catch.



In order to **close** the shutter, press down the shutter catch and turn the shutter inwards. Then turn the locking lever until the turn bar lock engages by itself.



Operating the hinge locking mechanism

When closing the shutter, press the hinge locking mechanism and turn the shutter inwards. When opening the shutter, the hinge locking mechanism engages automatically. The shutter can be unhinged or hinged at approx. 15° opening angle.



Adjustment of slats

Adjustable slats are adjusted via a thumbscrew. Loosen it and move it up or down until the slats are in your desired position. After reaching this position, carefully tighten the thumbscrew again.


Blinds

Protection from strangulation hazards EN 13120

Buildings with ball chain-driven blinds to which children between 0 and 42 months have access or can stay in, such as homes, hotels, hospitals, churches, shops, schools, nurseries and public buildings, have to be equipped with a "child safety device" on the inner end (blind with ball chain). Protection from strangulation hazards also applies if the place of use is unknown.

Protection from strangulation hazards does not apply to buildings to which children generally have no access, such as offices, factories, laboratories etc.

2. OPERATION

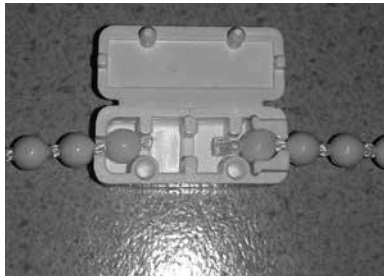

Child-proof version: with tear-off system of 6 kg within 5 sec. Connection with 1 ball



Non-child-proof version:
Connection with 2 balls



1. To **lift**, **lower** or **turn** the blinds, unfasten the ball chain from the ball chain holder.



2. Then bring the blind into the desired position by pulling downwards - as straight as possible - on the ball chain above the ball chain connector. Finally, re-fasten the ball chain in the ball chain holder.

2. OPERATION

Wired integrated Venetian blind

To manually set the upper end position, the Venetian blind must be pulled up fully. Within 2 seconds, move the blind slightly down and then immediately up again. The Venetian blind will move to the upper end position and the cord will relax. The upper end position is now set.

Insect protection

Pull-down flyscreen

To close the pull-down flyscreen

Pull the screen down with both hands until it engages in the catch.

To open the pull-down flyscreen from the inside or outside

Push down with both hands until the catch disengages.



Friction-fit frame

1. Open the window. Hold the friction-fit frame on plastic clips and put it into the frame clearance on the outside. Position the bottom brackets first between the window frame and gasket.




2. Pull the friction-fit frame into the frame clearance so that the top brackets can also be positioned into the window frame by moving the plastic clip up. Afterwards fold the plastic clips down.



2. OPERATION

2.5 I-TEC VENTILATION IV40

Operation

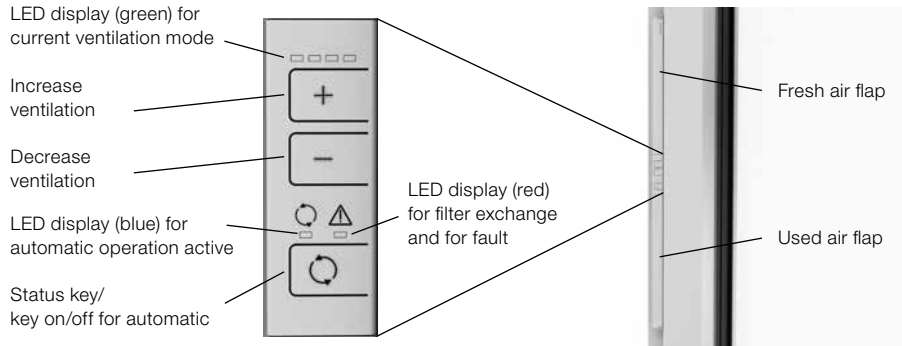

Respective ventilation mode is displayed with green LEDs in the display field.

LED display goes out after 1 minute.

Level 1-3:

By pressing the + or – key, the ventilation is increased or decreased by one level.

Level 0 (ventilator switched off):


ventilator on level 1 and press the – key for 2 seconds.

The ventilator can also be switched off by closing at least one air flap (fresh air, used air). After opening both air flaps, the ventilator runs again at its previous setting.

Note:

Even if both air flaps are closed, depending on the wind load, air can be pressed into the ventilator.

LED display of ventilation levels

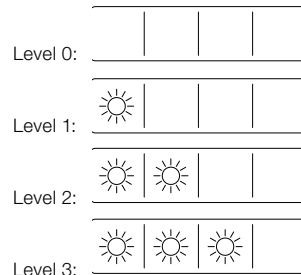

 = LED illuminated green

2. OPERATION

Status key / automatic On/Off:

If the LEDs have gone out, the current status can be displayed again for 1 minute by pressing the status key/ automatic key.



Status key/automatic key

Turbo mode (level 4):


Pressing the + key for at least 2 seconds to activate the turbo mode (level 4).


Within 15 seconds, you can select the desired running time between 1 and 4 hours by pressing the + or – key.


Pressing the + key increases the running time, pressing the – key decreases the running time. After selection time of 15 seconds, all 4 LEDs illuminate green for 2 seconds and the running time can no longer be changed.

Once the running time is completed or the turbo mode has been deactivated by pressing any key, the I-tec ventilator automatically returns to the previously set ventilation level.

Turbo mode

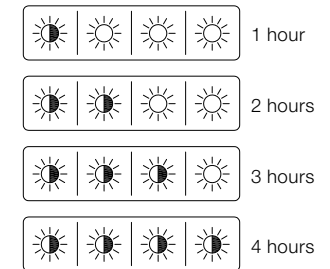

 = LED illuminated green


 = LED flashing green

Automatic mode:

While the operation mode is displayed, by pressing the status key/automatic key, the automatic mode can be switched on or off (blue LED is illuminated when automatic is ON). Air humidity is measured in automatic mode and this ventilator is controlled in such a way that always a healthy room environment always prevails. The ventilator switches off below approx. 35% humidity. Once the humidity rises, the ventilator switches on again.

Depending on humidity levels, the corresponding ventilation level is selected automatically.

Also, the LED for automatic operation goes out after 1 minute, again - by pressing the status key, it is displayed again if the automatic operation is active.



Status key/automatic key

2. OPERATION

Night cooling:

Night cooling serves to prevent overheating of living areas during the summer months. In addition, the fresh air ventilator or used air ventilator can be deactivated. This overrides the function of the heat exchanger and cooler outside air is blown directly into the room (night cooling fresh air) or warm room air is blown to the outside (night cooling used air). The best effect is achieved if two ventilators opposite each other in the house are set in such a way that one ventilator is in fresh air mode and the other one in used air mode. This causes cross-ventilation in the building without the need for opening or tilting windows. If only one ventilator is available, we recommend tilting a window on the opposite side of the house, otherwise the desired effect can only be partially achieved.

Night cooling - fresh air:

With this, only the fresh air ventilator is in operation, the used air ventilator is switched off.


By simultaneously pressing the + key and the status key, night cooling fresh air is activated.


Within 15 seconds, the desired ventilation level can be selected by pressing the + or – key.

Pressing the + key increases the ventilation level, pressing the – key decreases the ventilation level.

After a selection time of 15 seconds all 4 LEDs illuminate green for 2 seconds and the ventilation level can no longer be changed.

Pressing any key will deactivate night cooling. The ventilator returns to its previously set ventilation level.

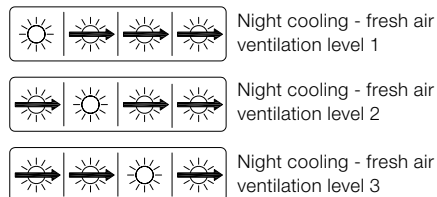

 = LED illuminated green

 = LED green chase light to the right

2. OPERATION

Night cooling - used air:


With this, only the used air ventilator is in operation, the fresh air ventilator is switched off.

Within 15 seconds, the desired ventilation level can be selected by pressing the + or – key.

Pressing the + key increases the ventilation level, pressing the – key decreases the ventilation level.

After a selection time of 15 seconds all 4 LEDs illuminate green for 2 seconds and the ventilation level can no longer be changed.

Pressing any key will deactivate night cooling. The ventilator returns to its previously set ventilation level.

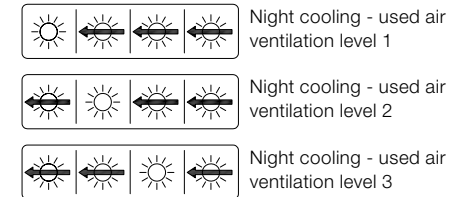

 = LED illuminated green

 = LED green chase light left

Automatic switch-off function during automatic mode or night cooling:

If outside temperature exceeds room temperature, ventilator automatically switches off. Every hour, ventilator checks temperature conditions by switching both ventilator motors on for a short time. If outside temperature is still higher than room temperature, ventilator switches off again. If outside temperature falls below room temperature, ventilator automatically returns to night cooling mode.

Temperature monitoring takes place with sensors which are built into the inside of the ventilator. Detected values for inside and outside temperatures can therefore deviate from externally measured temperatures.

2. OPERATION

Warning/fault:

A red LED appears if a filter change is required (the display is time-controlled)



Cancel the display "filter change":

Press the + and – key simultaneously for at least 5 seconds.

The red LED flashes if there is a fault in the appliance. If the fault has only occurred for a short time, the display can be cancelled as follows:

Press the + and – keys at the same time; shortly afterwards additionally press the status key/automatic key and keep all three buttons pressed.

If the fault message is displayed again after 1 minute, please contact your window distributor.

Pressure conditions in the room when operating the ventilator:

In principle, ventilation control works in a balanced way and works to avoid over-pressure in the room, however the speed of the used air ventilator is slightly raised compared to the fresh air ventilator. The pressure in the room is massively influenced by the pressure conditions in the building or the pressure/suction conditions due to wind loads.

If you would like to have an open fireplace, please be in contact with your chimney sweep. For complete protection when operating open fires, an additional pressure controller might need to be installed in the room.

Visible and invisible control of the wireless module:

The I-tec ventilator can be conveniently controlled using the handheld transmitter for the I-tec Shading or the I-tec SmartWindow app on a mobile phone or tablet. To avoid having to find the I-tec ventilator again with a new search after it has already been listed in the handheld transmitter or gateway, the wireless module can be 'hidden' via the handheld transmitter or the SmartWindow app. This does not affect control of the ventilator.

To 'show' the wireless module again in the operating unit on the window:

Switch the ventilator into standby mode. By pressing the + and status keys simultaneously for a minimum of 10 seconds, all LEDs will start to flash green.

Press the - key briefly within 15 seconds and this shows the wireless module again for the gateway or handheld transmitter.

2. OPERATION

Frost protection device:

To prevent danger of heat exchangers icing up when the ventilators are in operation, the ventilation system has been equipped with a frost protection device. The electronic device continuously monitors the extracted air temperature (after the heat exchanger).

If this falls below a certain value, the speed of the fresh air ventilator is decreased step by step. If there is still a danger of icing up, the ventilator is switched off for 2 hours.

After this, the ventilator starts again automatically, checks the temperature conditions once more and starts after 10 minutes either again in the frost protection mode or returns to normal operation.


Functioning in cold rooms:

If the room temperature falls below +8°C (e.g. on the building site), the ventilator is switched off. Operation is still possible at any time: pressing the + or - key switches on the ventilator again for 10 minutes. In this time, the ventilator checks the temperature conditions and either switches off again or returns to normal operation.



Installation of add-on elements:

If add-on elements are retro-fitted (e.g.: guide rails), please note that drilling and screwing is not allowed in the ventilator area (shaded area)!

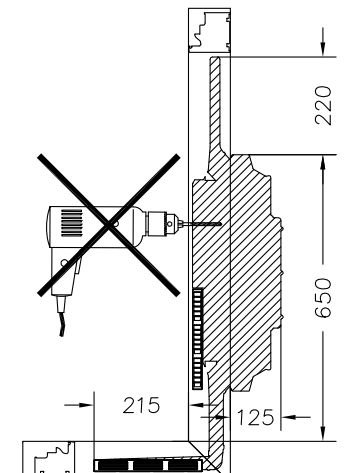

2. OPERATION

A note on maintenance:

For hygienic reasons, please change both filters at least once a year. The time-controlled LED display only serves as a reminder and does not take possible contaminated outside air into consideration.

Very dirty filters will also considerably impair the desired air exchange.

Autumn is an ideal time for exchanging the filters as generally air in winter is more polluted than in summer and therefore the filter would be most effective.



ATTENTION:

Danger of mould forming in the ventilation housing through condensation in a switched-off ventilator!




I-tec ventilation IV40 must not be used for dehumidifying construction shells or for drying out rooms with high humidity. This can lead to considerable damage to the ventilator.


2. OPERATION

Exchange air filter:

When the sash is open, the two filter lids for fresh and used air are visible.

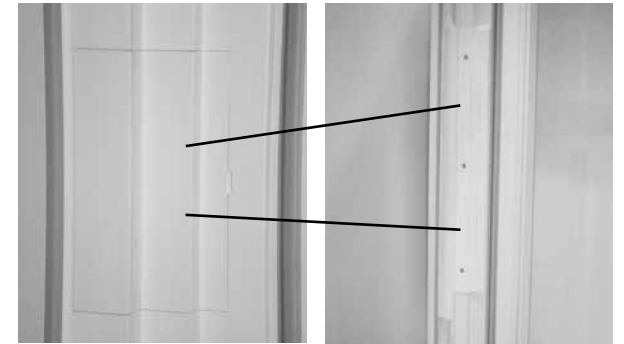

Open the filter lids either with a fingernail or carefully with a flat screw driver. Gently push towards the outside of the frame.

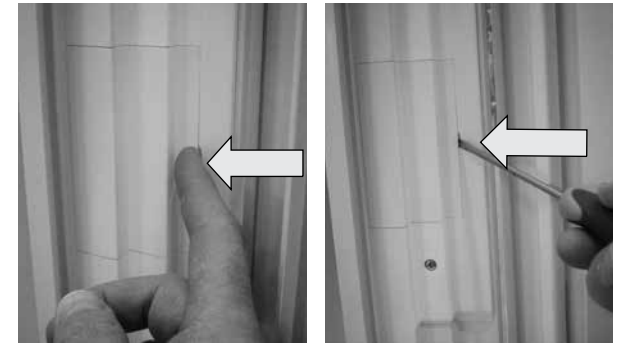


Take the filter lids off and pull the filter out.




The ventilator is not suitable for dehumidifying construction shells or for drying out rooms with high humidity.

2. OPERATION

Insert the new filter in the direction of the arrow.

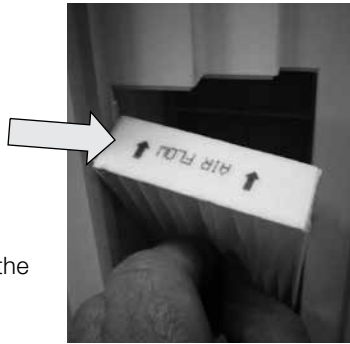

Ensure the filter fits properly!

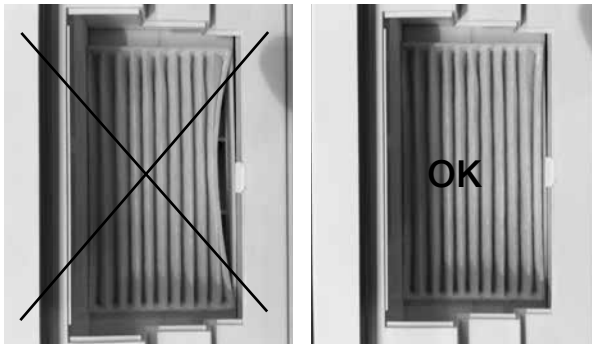


Put the filter lid back and press till it clicks into place.



2. OPERATION


If air flaps have been accidentally released.

The air flaps can be opened without restriction to about 55°. If the flaps are pushed any further, they detach from the air vent frame.

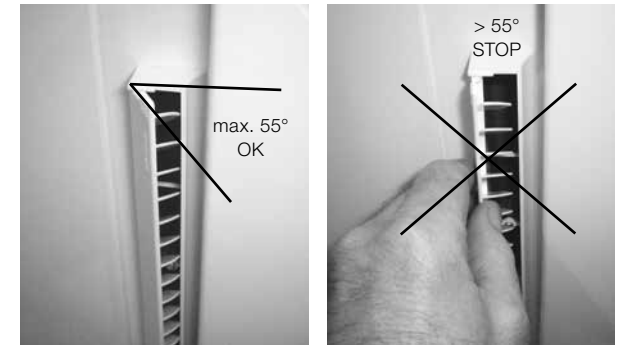


If the flap has come out, slide the flap end with the finger lug on to the bolt and close the flap.

First, engage the end of the flap nearer the operation unit with a bit of pressure.

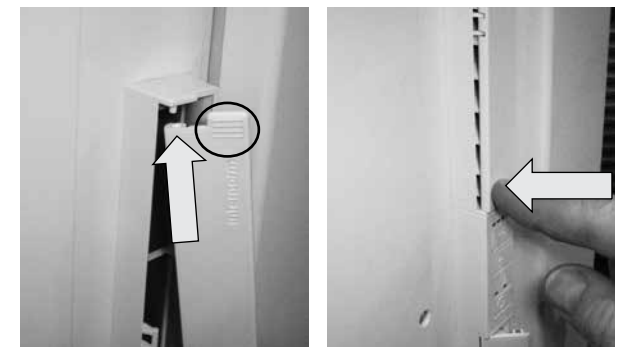

Then engage both middle bearing points with a bit of pressure.


Now the air flap can be operated again as usual.

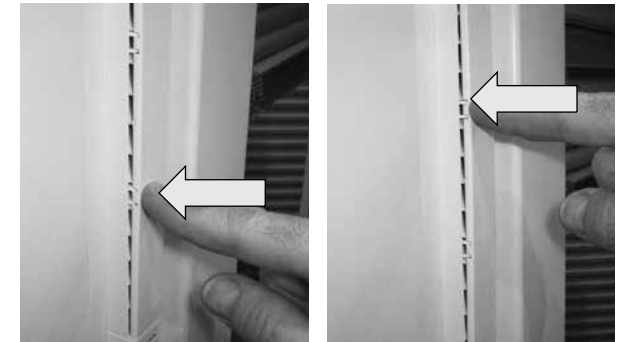

2. OPERATION

2.6. PERMANENT VENTILATOR AEROMAT MIDI HY F3

Operation

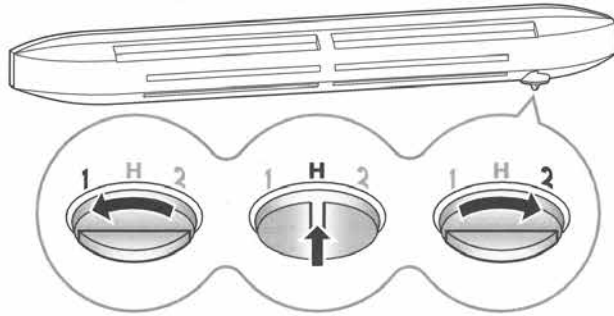

The Aeromat midi HY permanent ventilator is a humidity-controlled ventilator. Model F3 also has a control with the following setting options:





- 1... Closer lock while maintaining minimum ventilation
- H... Control dependent on humidity
- 2... Lock of maximum air volume flow


2. OPERATION

2.7. I-TEC SHADING

Operation

Key description:

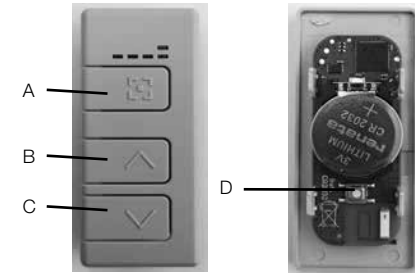

- A:  Selection key
- B:  Key Up
- C:  Key Down
- D:  Program key



To move the blind: press the Up  or Down  key briefly to move the blind to the top or bottom end position.

press the Up  or Down  key briefly to stop the blind.

Adjusting the slats:



press the Up  or Down  key longer to adjust the slats to the desired angle.

Channel selection:

press the Selection key  briefly to select the desired channel.

The selected channel is displayed by constantly lit LEDs. 

Individual fixed position:

press the Up and Down key at the same time  , to move the blind to the programmed individual position.

An overview of all functions can be found in the enclosed programming instructions.



Intensive solar irradiation on dark façade colours or window colours can lead to temperatures of over 80°C in the gap between the panes.

To increase the life of the batteries, the electronics are equipped with overheating protection. With temperatures of about 70 to 80 degrees this will only allow the blind to move down and the slats to turn. Over 80 degrees no operation of the shading is possible until temperatures have cooled down again.

Excessive shade or darkening in the area of the photovoltaics module can cause a reduction in energy gain.

E.g.: Balcony on top, awning, narrow town lanes, etc.

As this system is based on wireless control, wireless communication and range can be affected by local circumstances.

E.g.: Stone walls, steel beams, etc.

2. OPERATION


Changing the battery



First, move the blind to the top. Turn the handle to open the window. Undo plastic latches/clips to open external pane.



Remove the blind unit by undoing the grey release clips - with the help of a tool if necessary - and pull it down.

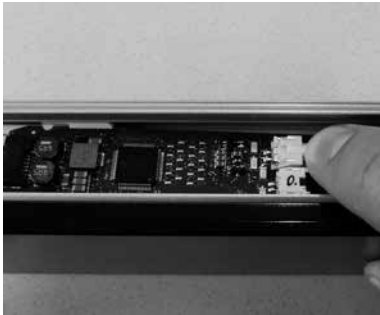

Disconnect the connector between the battery and the circuit board so that the battery can be removed.



Remove the battery from the mount. Fit the new battery and plug the connector into the circuit board. Please ensure that the cable does not come into contact with the side of the rotating shaft.

2. OPERATION


Changing the battery on the integrated operating unit



Slide open the cover of the operating unit to the top and take out the operating unit.

Remove the battery from the operating unit, insert a new one, replace the cover and slide it down.

Changing the battery on the handheld transmitter

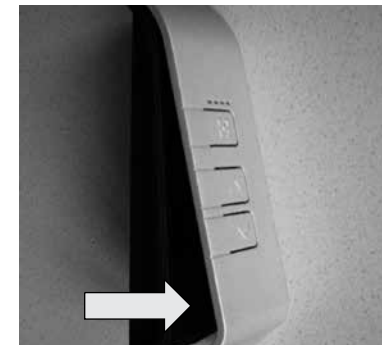

Push the cover at the bottom to the side to open the clip connection.



Remove the old battery, insert a new one and replace the cover.



Please dispose of used batteries in an environmentally friendly manner!

2. OPERATION

Manual charging function for I-tec Shading for windows with integrated blinds



1. Tilt the window



2. Put the plug outside through the tilted window.



3. Open the window



4. Insert the plug into the manual charging socket, close the window and connect the charger to the socket

The LED on the charger lights up green as soon as the battery is fully charged. Disconnect the charger from the power supply and remove the connector in reverse order.

2. OPERATION

2.8 OPENING CONTROL (WIRELESS)

Operation


The signal (868 Mhz) is sent to the smart home system for wireless monitoring. The status of the window can be confirmed with the respective smart home system (sash locked, open, tilted and battery status). You can check which smart home systems are compatible with wireless window monitoring under I-tec Connect on our website. To connect the wireless opening monitoring, please follow the instructions of the smart home system or associated software or App.

To pair the opening control, re-insert the batteries. Two batteries (type AAAA) have already been inserted in the factory. Take off the battery cover first before removing the batteries.

Remove the batteries and wait for 10 seconds.

Re-insert the batteries. Watch for correct polarity! Replace the battery cover. The learning process can now be completed.

To reactivate the learning mode repeat the process.

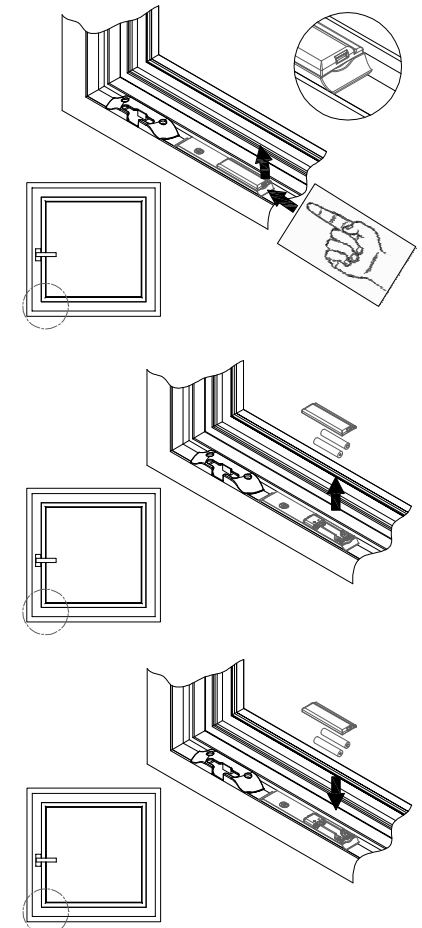

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Possible adjustments on windows and window system doors




Ensure that adjustment ranges are only used to an extent that does not impair functionality!

Black or red distance wedges that were pressed into closing elements and are possibly still present, must be removed.


Height adjustment

Used to raise or lower the sash.

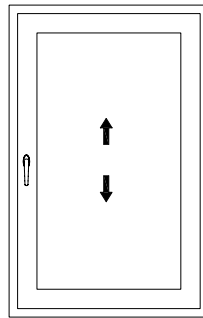


Closing pressure adjustment


Used to regulate gasket pressure.

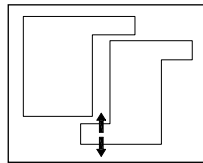

Side adjustments

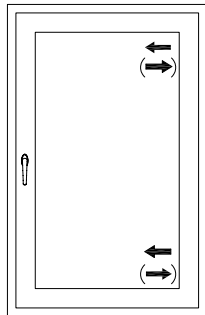

If hinged parts are adjusted in the same direction, the sash may be adjusted horizontally.

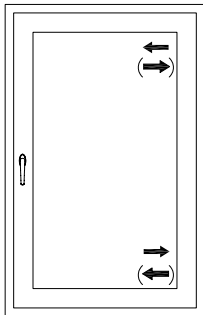

If hinges are adjusted in the opposite direction, this leads to the raising or lowering of the sash on the lock side.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

3.1. CONCEALED HARDWARE


In order to prevent damage and to retain full functionality of the window, we recommend that all adjustment works are carried out by authorised personnel.

3.1.1 VV HARDWARE (CONCEALED STANDARD)


Corner / sash bearing on rectangular window (hinge side - at the bottom)



Adjust towards the hinge or the handle side with a 4 mm Allen key.

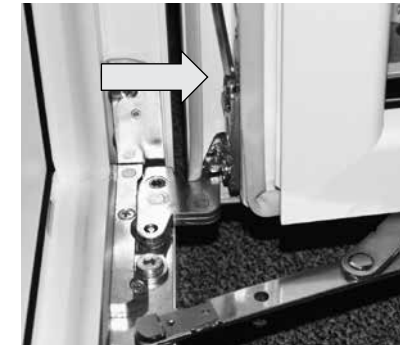


Raise or lower the sash with a 4 mm Allen key; for heavy-duty hardware use a torx T25.

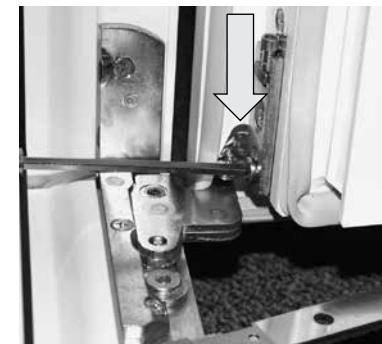


Adjust the closing pressure with a 4 mm Allen key.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Stay arm bearing / turn bearing on rectangular window (hinge side top)

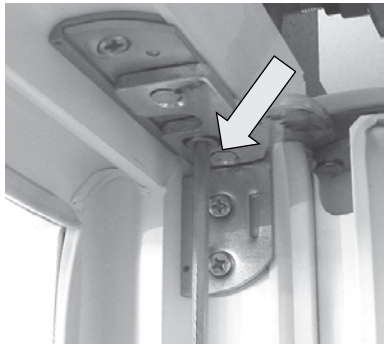

Adjust towards the hinge or drive side with a 4mm Allen key.

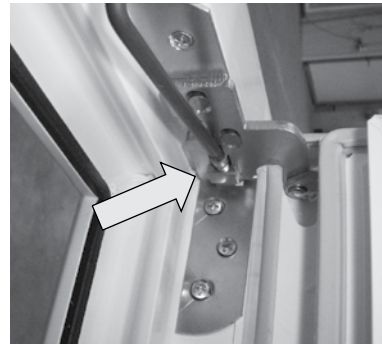

For heavy-duty hardware use a torx T25.



Pressure adjustment on locking parts

Adjust the required closing pressure with an 11 mm spanner. Adjustments can be made in steps of 22.5°.


3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Tilt sash




Vertical adjustment, version a

Tilt the sash. Raise or lower the sash with a 4 mm Allen key.

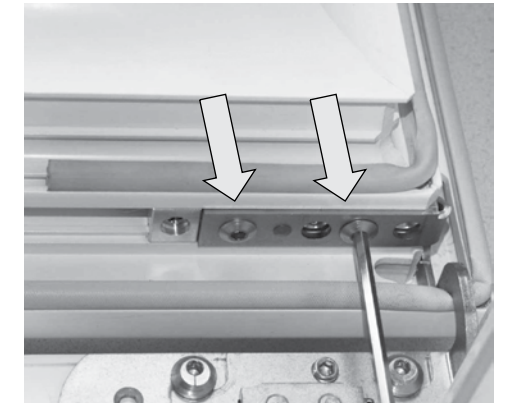

Vertical adjustment, version b

Open the sash to max. 90°. Raise and lower the sash alternately with a 4 mm Allen key.

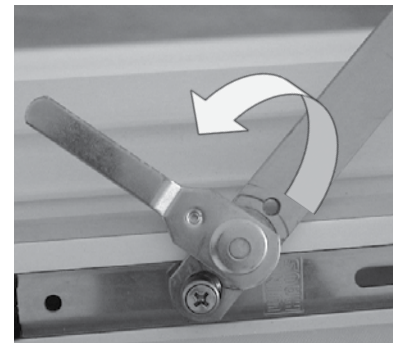

1. Horizontal adjustment


Open the rebate stay arm lock, unhinge the rebate stay arm and bring the sash into the cleaning position.




2. Horizontal adjustment

Unlock and unhinge the cleaning stay arm. **ATTENTION:** the sash is now unsecured and must be secured by a second person! Tilt the sash by no more than 90°!

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

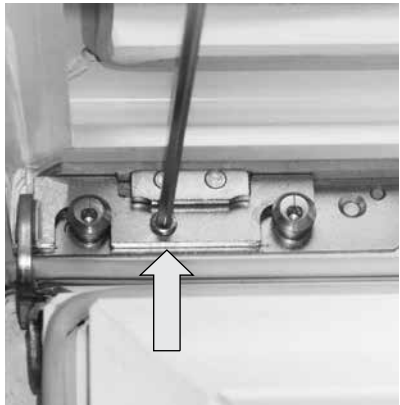

Loosen the locking screw on the tilt hinge with a 4mm Allen key.

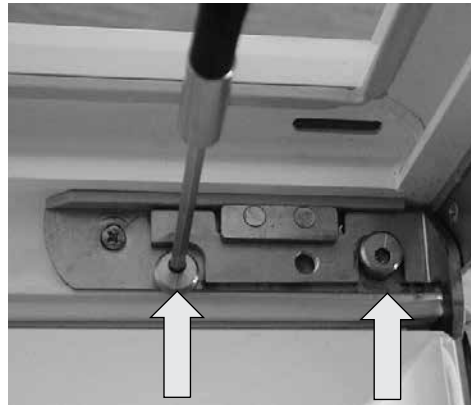

Turn the security bolt on both tilt hinges by 180° with a 5 mm Allen key.



ATTENTION: The sash is no longer secured against unhinging! Danger of falling out!
Adjust the sash horizontally and perform all steps again in reverse order.


3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

3.1.2 VV HARDWARE (CONCEALED TOPSTAR)


Corner / sash bearing on rectangular window (hinge side bottom)

Raising and lowering the sash with a 4 mm Allen key (1).

Adjusting the direction of the hinge or drive side with a 4 mm Allen key (2).

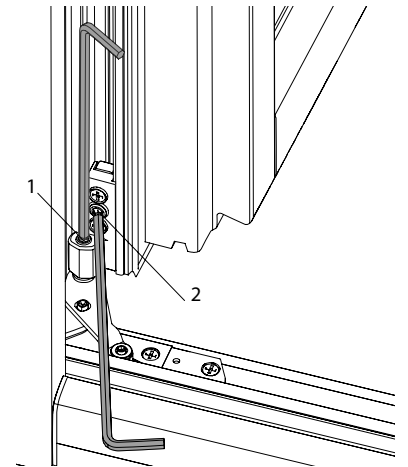


Closing pressure adjustment with a 10 mm spanner.

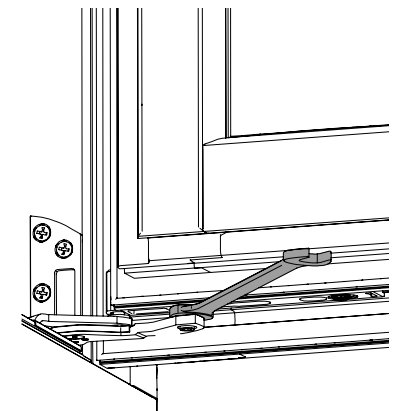


Stay arm bearing/turn bearing with rectangular window (hinge side top)

Adjustment in the direction of the hinge or drive side with a 4 mm Allen key.

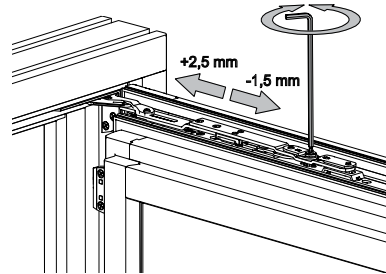

Tilt the sash

Tilt the sash. Lift and raise the sash with a 4 mm Allen key.

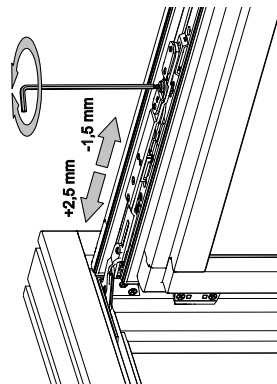


For information on adjusting the closing pressure and on hinging and unhinging of the rebate and cleaning stay arms, see chapter 3.3.3 VV hardware (concealed standard).

Adjust the sash with the sash support rod

If a sash support rod is installed, the factory setting is matched to the rod and sash bearing.

Always carry out height adjustment with both parts equal / parallel! (E.g.: sash support rod (1) 1/2 turns = sash bearing (2) 1/2 turns.

Otherwise the corner bearing bolt might not engage.

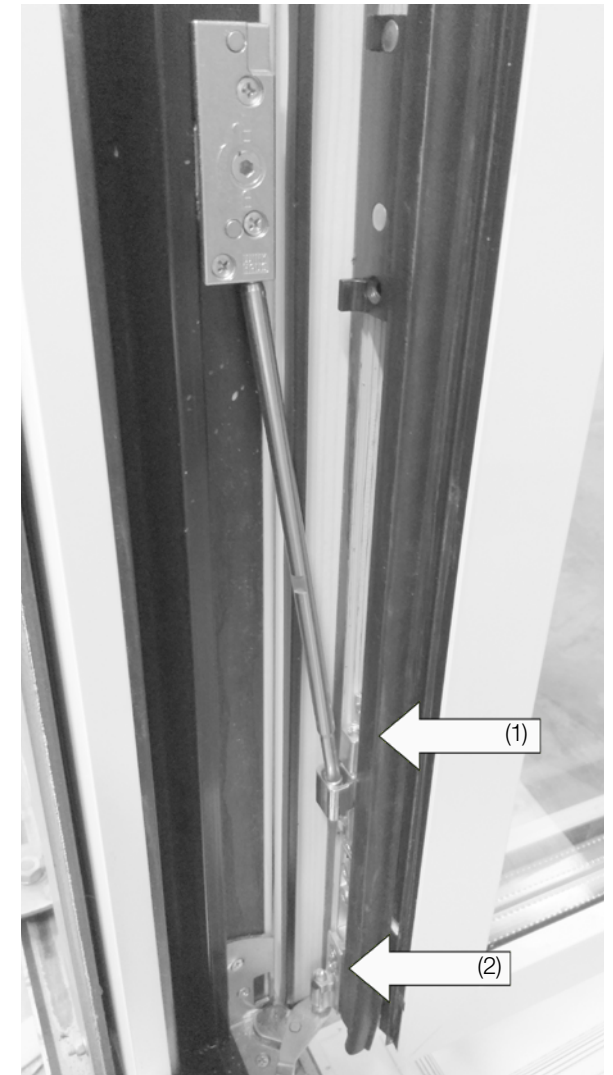



Raise and lower the sash via the sash support rod with a 4 mm Allen key.



Parallel (same number of turns as with the sash support rod!!!) raising and lowering of the sash bearing with a 4 mm Allen key.

3.1.3 I-TEC SECURE (CONCEALED FLAP LOCKING)

Corner / sash bearing on rectangular window (hinge side - at the bottom)




Adjust towards the hinge or drive side with a 4 mm Allen key.




Raise or lower the sash with a 4 mm Allen key.

Stay arm / turn bearing on rectangular window (hinge side top)

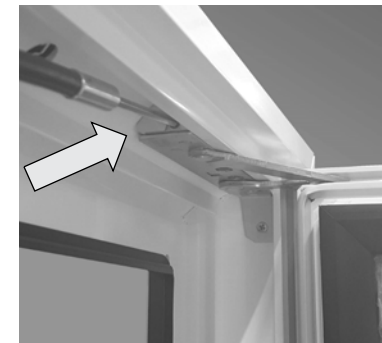


Adjust towards the hinge or drive side with a 4 mm Allen key.

Catch at doors

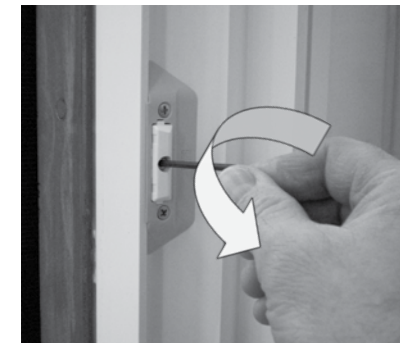

Adjust the catch with a 3 mm Allen key.

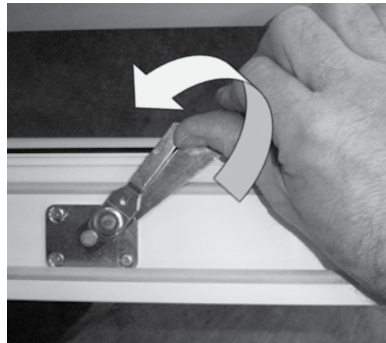

Open the rebate stay arm lock, unhook the rebate stay arm and bring the sash into the cleaning position.



Raise and lower the sash with a 4 mm Allen key.



If the height adjusting screw cannot be accessed in the cleaning position, the cleaning stay arm must be unhinged additionally, as well.


ATTENTION: The sash is now unsecured and must be secured by a second person! Tilt the sash by no more than 90°!




Open cleaning stay arm lock with flat screw driver and unhook cleaning stay arm.

Secure sash!!


Closing pressure adjustment (only for KF510 and KF520)

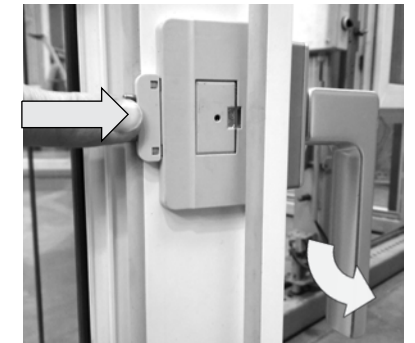

Press the faulty operation safety device when the sash is open and turn the window handle into the locking position.

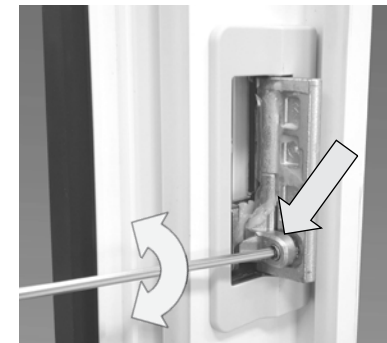

Adjust the closing pressure on the opened flap with a 2.5 mm Allen key.

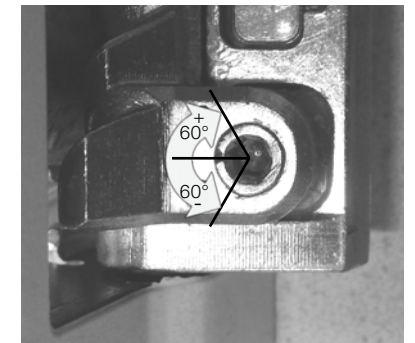


Closing pressure adjustment is possible from the middle position with a turn angle of about +/- 60° (+/- 1 mm sash adjustment)


3.2. EXPOSED HARDWARE

For some adjustment works, possible covering caps have to be removed first.


Sash bearing and corner bearing (hinge side bottom)

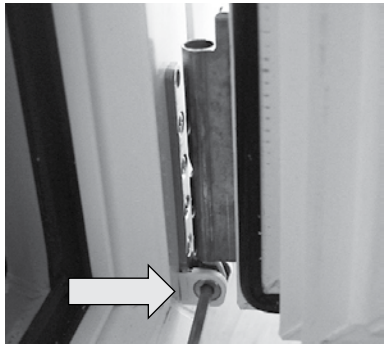


Adjust towards the hinge or drive side with a 4 mm Allen key.

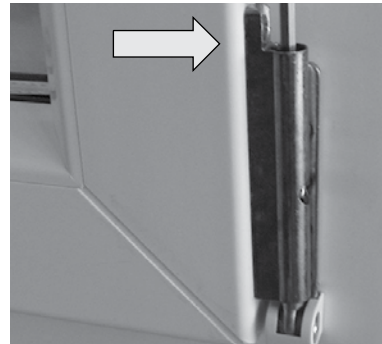

Raise or lower the sash with a 4 mm Allen key.

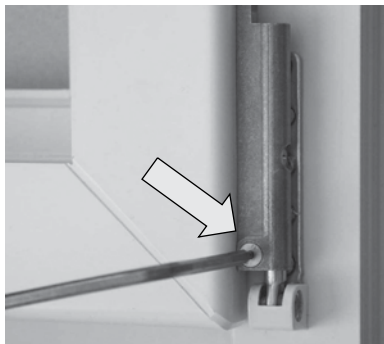

Adjustment of the turn limiter with a 2.5 mm Allen key, if right-handed - with the sash closed, if left-handed - with the sash open.

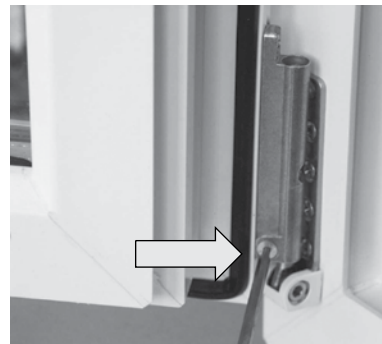


Stay arm bearing and turn bearing on a rectangular window (hinge side top)



Adjust towards the hinge or drive side with a 4 mm Allen key.

Tilt sash

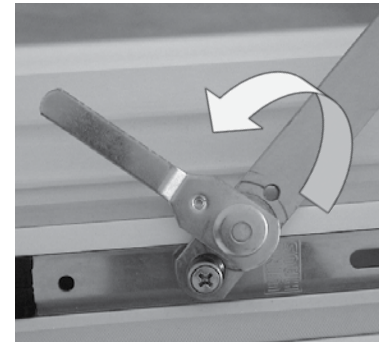

1. Vertical adjustment


Unlock the rebate stay arm and unhinge, then position the sash carefully in the window reveal.




2. Vertical adjustment

Unlock cleaning stay arm and unhinge.

ATTENTION: The sash is now unsecured and must be secured by a second person!

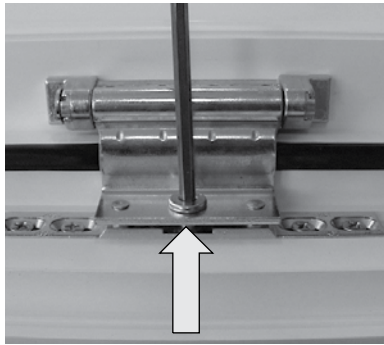


Raise and lower the sash with a 4 mm Allen key.

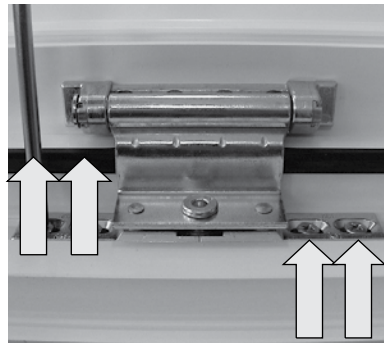

Horizontal adjustment

Unhinge the rebate stay arm and cleaning stay arm, as described above. Loosen the screws with a screwdriver, adjust the sash horizontally and tighten the screws again. Mount the cleaning stay arm and the rebate stay arm again and lock.

3.3. MORE HARDWARE VERSIONS

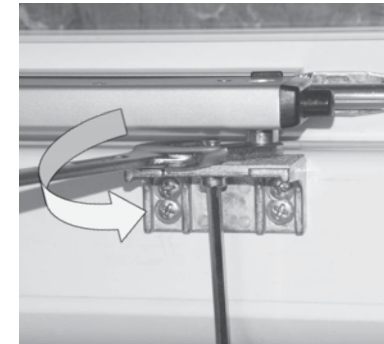


Fanlight hardware

Closing pressure adjustment

Remove the covering cap from the front. Loosen the screw at the bottom with a 4 mm Allen key, adjust the pressure with a 14 mm spanner and tighten the screw again.

Measures to adjust sashes, as described in previous chapters.

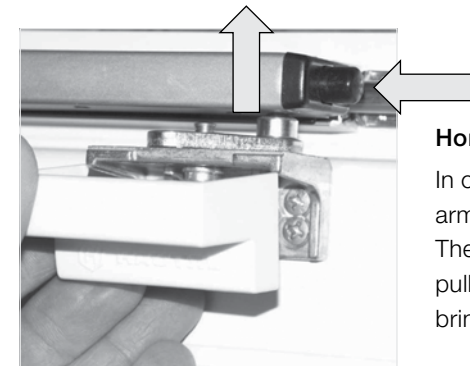


Horizontal and vertical adjustment

In order to be able to separate the stay arm from the bracket, first tilt the sash. Then press the safety knob on the stay arm, pull the stay arm upwards off the bolt and bring the sash into a secure position.




To open the sash completely for adjustment, undo the locking mechanism on the side-mounted safety stay arms.


For further measures for adjusting the sash, see descriptions in previous chapters (tilt sash).

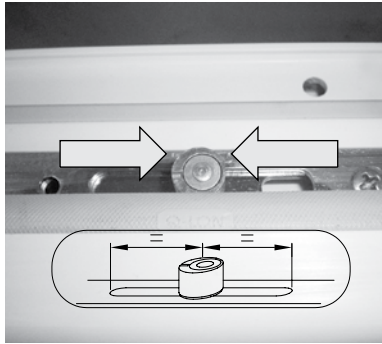

If a bolt of the fanlight hardware engages with the sash hardware, it is crucial to centre the locking bolt of the sash hardware which might have been moved to the side by accident, otherwise the sash cannot be closed.

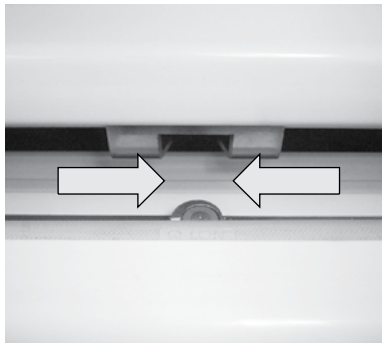


When closing the sash, the bolt of the fanlight hardware must re-engage with the locking bolt.

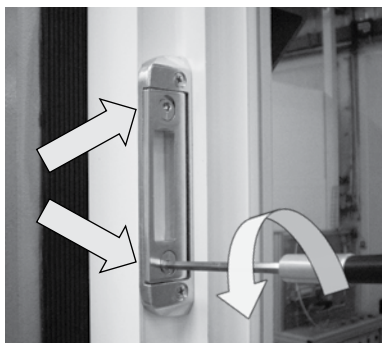

Multi-point lock and dead bolt lock

Closing pressure adjustment for latch:
Adjust the eccentric bolts of the closing element with a 4mm Allen key to adjust the closing pressure.

Measures for sash adjustments, as described in previous chapters.

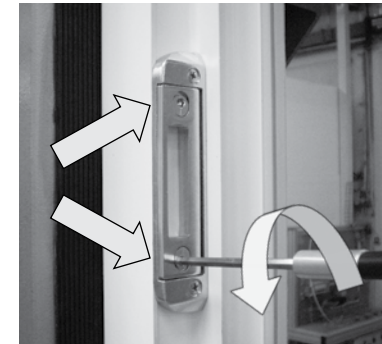


Side entrance door

Closing pressure adjustment for latch:
To adjust the closing pressure, adjust the eccentric bolts of the locking element with a 4 mm Allen key.



Closing pressure adjustment for locking bolt:

To adjust the closing pressure, adjust the eccentric bolts of the drive with a torx T15.

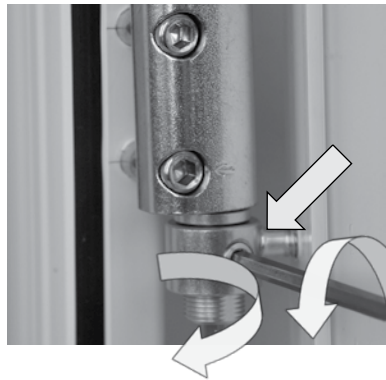


Three-dimensionally adjustable turn hinges (standard hinge)

Height adjustment

Loosen the safety screw for height adjustment with a 4 mm Allen key. This is only accessible with the sash open.

Then adjust the height adjustment screw from below with a 4 mm Allen key.

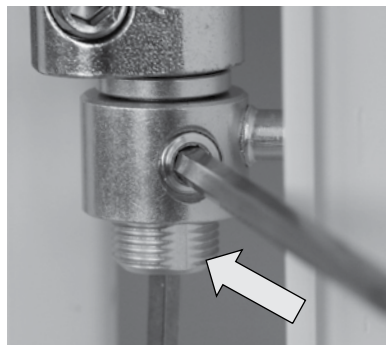


Before tightening the safety screw, ensure that it attaches to the flattened side of the height adjustment screw, otherwise the thread will be damaged.




Side adjustment

The screws for side adjustment are accessible from the reveal (soffit) side when the sash is closed and from the rebate side when the sash is open.

ATTENTION: the screw position indicated by the arrow is fixed to the centre part of the hinge. In order to avoid damage to the thread, loosen the other screw before adjustment!

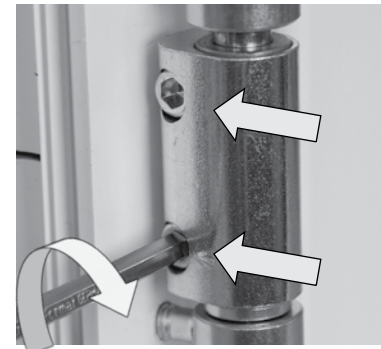


Side adjustment is carried out by adjusting both screws on the centre part of the turn hinge with a 5 mm Allen key.

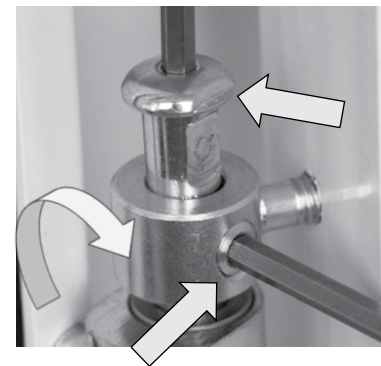

Closing pressure adjustment

Loosen the pin with a 4 mm Allen key. This is only accessible when the sash is open. Pull the pin upwards and unhinge the sash. Turn parts remaining on the door frame inwards or outwards.

ATTENTION: When re-fitting the sash, insert the pin so that flattened side faces the safety mechanism.

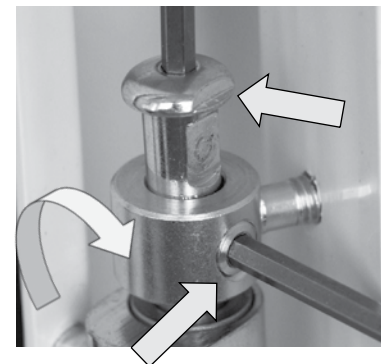


Lifting hinge with barrier-free threshold

Height adjustment

The sash needs to be unhinged in order to adjust the height. Loosen the pin safety device with a 4 mm Allen key. This is only accessible with the sash open. Pull the pin out towards the top.


ATTENTION: When re-mounting the sash, insert the pin so that the flattened side points to the side of the pin safety device.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

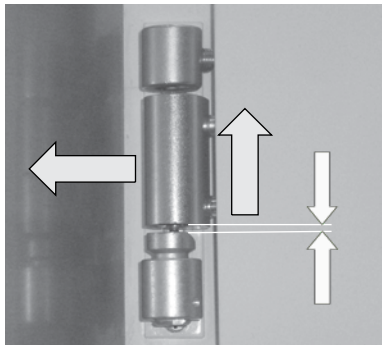


Lift the sash up until you can take it out.

ATTENTION: Do not stand the sash on its bottom gaskets! Risk of damage!

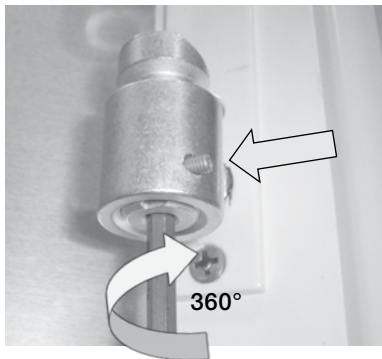

Loosen the securing screw with a 1.5 mm Allen key and turn the height adjuster through 360°.

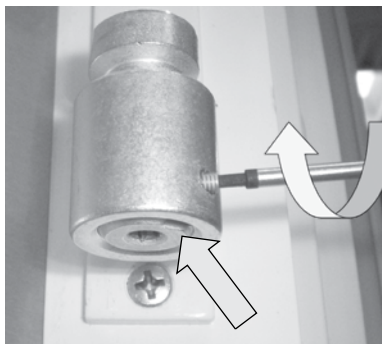

Please note that the notch on the height adjuster lies in the position shown. Tighten the securing screws again. This puts the height adjuster exactly in the desired position.

ATTENTION: the securing screw must not be too tight when screwing it in!

Side adjustment and closing pressure adjustment

Side and closing pressure are adjusted in the same way as standard hinges.


3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES



X hinge with timber/aluminium elements

Height adjustment

Loosen the securing screws for the height adjuster with a 4 mm Allen key. These are only accessible with an open sash.

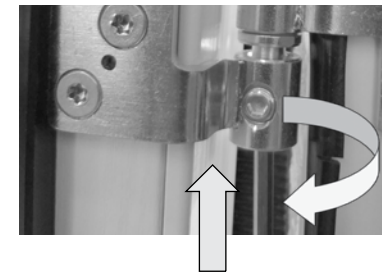


Afterwards, adjust the height adjustment screw from below with a 4 mm Allen key.

Before tightening the securing screw, ensure that it meets the flattened area of the height adjustment screw, otherwise the thread will become damaged.




Side adjustment

Open the securing screw, pull the pin out towards the top and unhinge the sash. Side adjustment is carried out by removing or adding packers from the accessory pack below the frame part of the hinge. Loosen the hinge screws with a Torx 20.

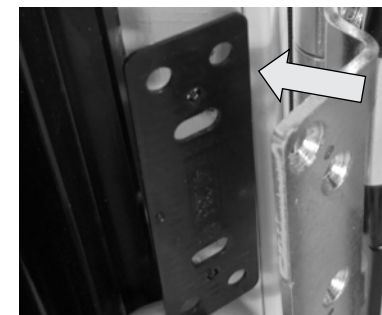

Afterwards screw the hinge back on to the sash, re-mount the sash, insert the pin and tighten the securing screw.

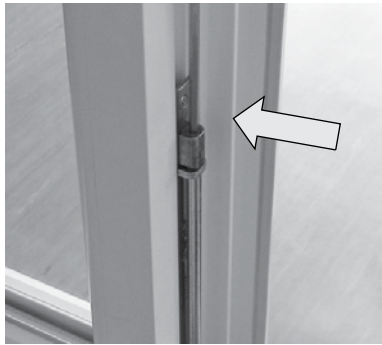


3-sash window without mullion, centre sash


Adjust the side sashes as described in previous chapters.

Height adjustment

First, open the side sashes. Adjustment is carried out on the support bar of the centre sash with a 4 mm Allen key.




Depending on the window system, the height is adjusted directly on the sash bearing with a 4 mm Allen key.

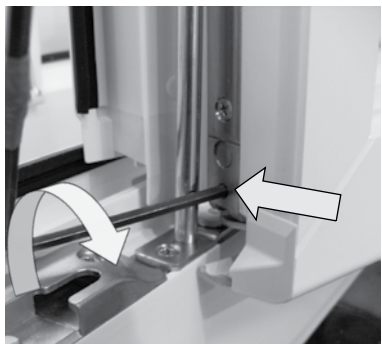


Side adjustment of corner bearing

Open the centre sash so far that the Allen screw is no longer covered by the support bar. Adjust with a 2.5 mm Allen key.

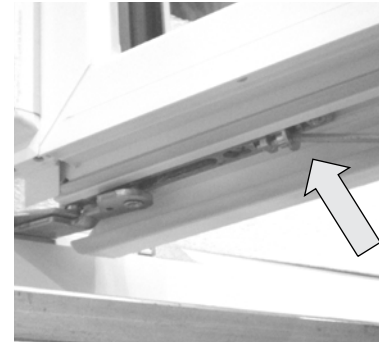


Depending on the window system, side adjustment with an opened sash is carried out horizontally at the bottom with a 4 mm Allen key.

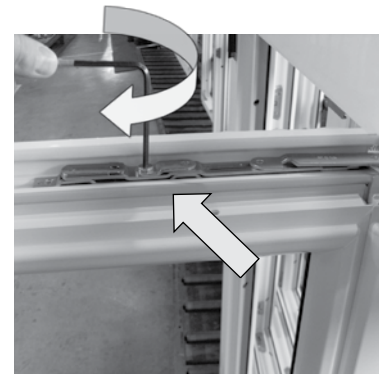

Side adjustment of turn bearing


Open the centre sash. Adjust it with a 4 mm Allen key.

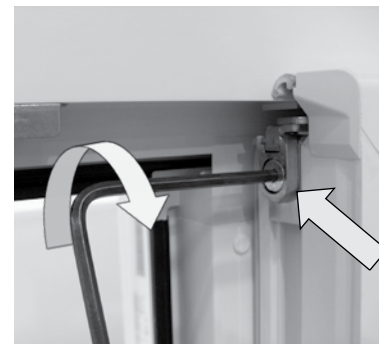


Closing pressure adjustment of turn bearing

Adjust with a 4 mm Allen key.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

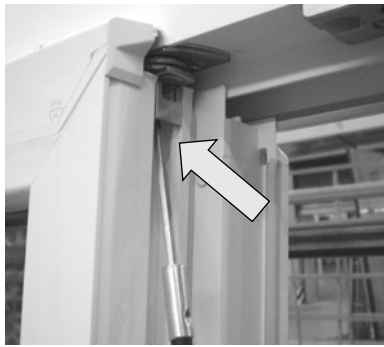


Depending on the window system, the closing pressure can be adjusted inside the hardware groove. Use a 4 mm Allen key with a spherical head.

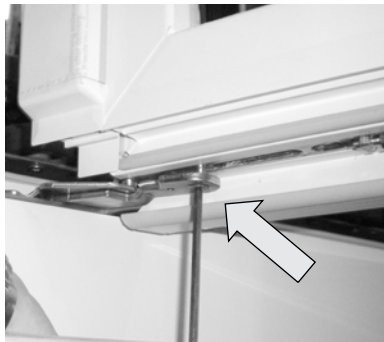

Closing pressure adjustment, corner bearing
Open the sash fully. Adjust with a 4 mm Allen key.


Depending on the window system, no closing pressure adjustment is provided on the corner bearing.

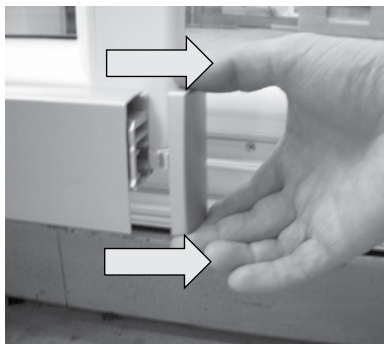


Parallel sliding window, height adjustment

Pull the covering cap off from the runner, sideways.


3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

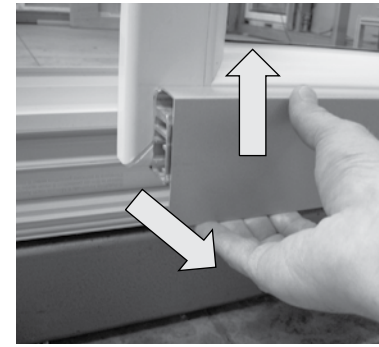

Remove the cover profile from the holding clips at the bottom and lift off towards the top.

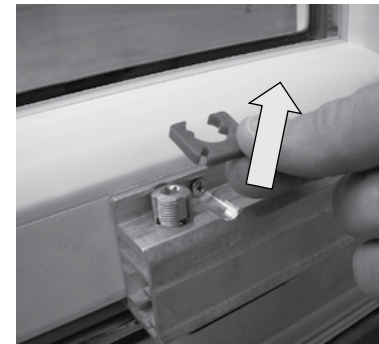


Remove the turn stop from the height adjustment screw.

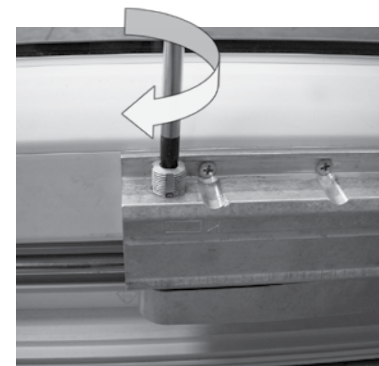


Adjust the sash with a torx T40.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

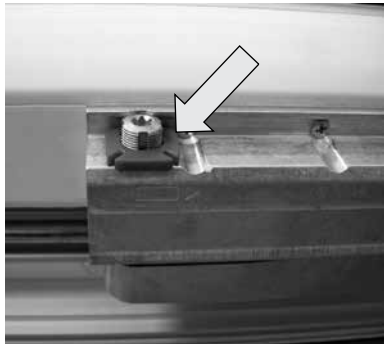

Replace the turn stop.

Re-attach the cover profile and press on tightly at the bottom. Replace the side cover caps.

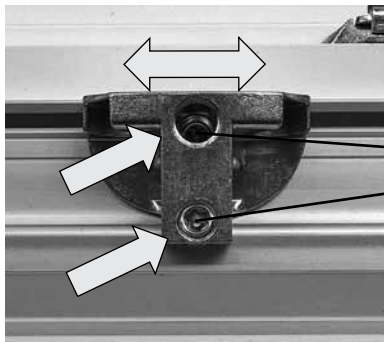


4-5 Nm

2-3 Nm

Bottom stopper sliding direction "CLOSED"


Loosen the screw with a torx T25, move the control block sideways and tighten the screw again.

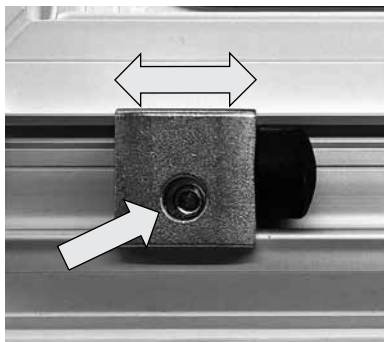

Bottom stopper sliding direction "OPEN"


Loosen the screw with a torx T25, move the buffer sideways and tighten the screw again (4 – 5 Nm).

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

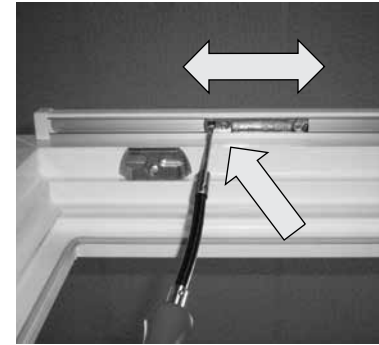

Top stopper sliding direction "CLOSED"

When adjusting the bottom stopper or changing the height adjustment, this might also necessitate adjusting the top stopper. Loosen the screws with a torx T25, move the stopper sideways and tighten the screws again (3 – 4 Nm).

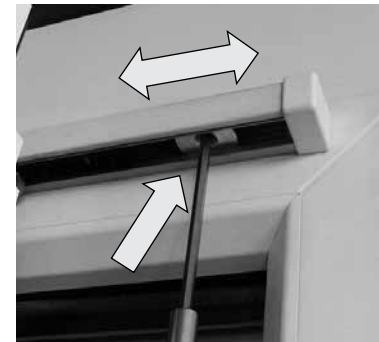


Top stopper sliding direction "OPEN"

In addition to the running rail, also at the buffer in the guiding rail. Loosen the screw with a torx T25, slide the buffer to the side and tighten the screws again (3 – 4 Nm).



Stopper buffers serve to limit the opening and must not be used for abrupt stopping of the sliding sash!

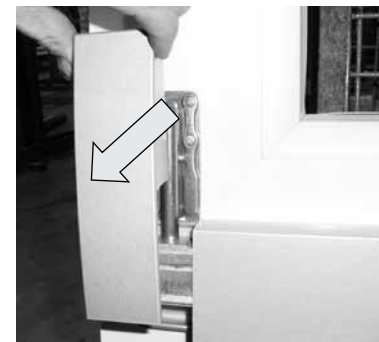

Parallel sliding door

Any adjustment possibilities are the same as for parallel sliding windows.

Height adjustment

Pull the cover cap off towards the front. Remove the cover profile and adjust the height as described under "parallel sliding windows".

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES



Lift & slide door

Side adjustment dead bolts

To avoid possible collisions of the dead bolts with the drive, side adjustment of the dead bolts is possible.

(only applies to schemes A and C)

To do this, loosen both screws, slide the dead bolt parallel and tighten the screws again.


Comfort Close (optional)

The Comfort Close slows down the sash in the closing direction approx. 100 mm before the end position and then gently pulls it towards the closed position. The force required to open the sash increases slightly (45 N).


The gap between the sliding sash (lifted) and the frame can vary due to various influences (assembly, tolerances, wear and tear, ceiling dropping). The height adjustment of the Comfort Close must be aligned accordingly.

Height adjustment

Height adjustment with Torx 15
Adjustment screw flush on delivery.
For a maximum setting of +3 mm, the screw is unscrewed by 6 rotations.

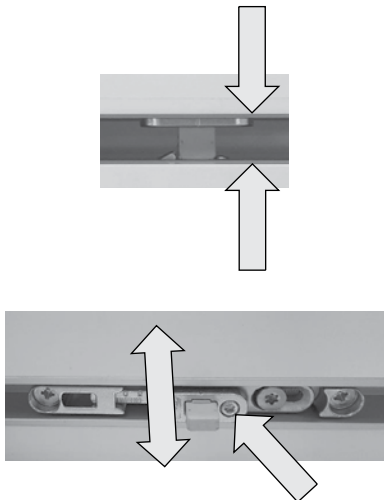

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

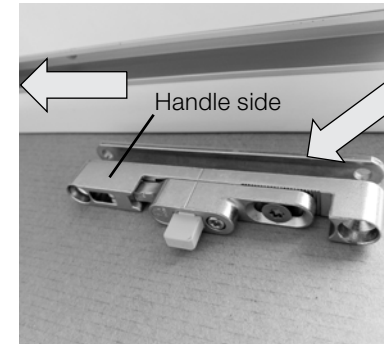


If the adjustment track is no longer sufficient for the Comfort Close to function effectively due to the gap size, the 3-mm thick packer can also be removed. To do this, unscrew Comfort Close from frame and reassemble it in the same mounting position.




If installed incorrectly, the Comfort Close could be damaged!

Distance between sliding sash and frame (sash elevated)	Packer frame element 3 mm	Adjustment of height of slider Frame element (Torx 15)
4 mm	remove	0 mm (delivered state)
5 mm	remove	1 mm (= 2 turns)
6 mm (= theoretical distance for HS330)	remove	2 mm (= 4 turns)
7 mm (= theoretical distance for KS430)	built-in	0 mm (delivered state)
8 mm	built-in	1 mm (= 2 turns)
9 mm	built-in	2 mm (= 4 turns)
10 mm	built-in	3 mm (= 6 turns)

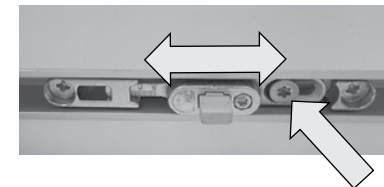

Side adjustment

Side adjustment with Torx 25. Loosen the screw, move the functional part and tighten the screw again (max. 3 Nm).

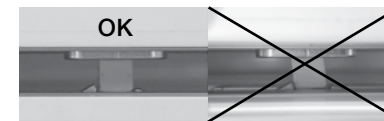

To do this, first close/lock the sash and unlock it again (lift the sash). The sliding sash should now easily fit within frame. Carry out visual inspection.




3.4. FRONT ENTRANCE DOORS

Adjustments on the lock side apply to aluminium and timber/aluminium front entrance doors.

Adjustment of the latch locking part also applies to:

- AT piece
- Electric door opener (ETÖ)
- Mechanical day latch (MTOE)

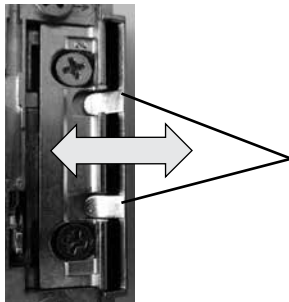

It controls the closing pressure from the lock side for dead bolt locks and multi-point locks.

1. Remove both fixing screws.
2. Adjust the latch locking part (adjustment via raster).
3. Replace the fixing screws.


Lock casing for multi-point locking types MV, MVB, MVC, EVC and EVE

Regulates the contact pressure on the lock side

To adjust, first loosen the 3 fixing screws. Then make the adjustment using the two eccentric screws.

The position is indicated by the marked point on the screws.

Then clamp with the fixing screws.

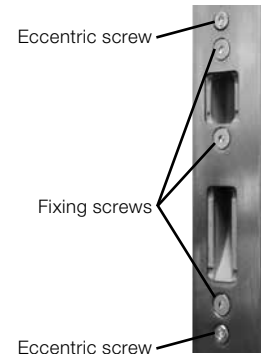

Lock cases for bolt / hook bolt for multi-point locking types MVAM and EE

Here, **no** closing pressure can be adjusted via the lock cases.

Adjustment has to be carried out in such a way that the trigger bolt and hook bolt can engage freely after the door sash has been closed – preferably in the centre.

Check: Press strongly against it in the lock case area.

➔ The door sash should not move much!

The adjustment process is identical.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Additional catch for aluminium front entrance doors

With this part, the hold for the door sash can be adjusted, if it is not fixed through the lock latch:

- Electric door opener (ETÖ) in unlocking position
- Mechanical day latch (MTOE) in unlocking position
- Latch retracted (manual or electrical)
- Latch fixed in retracted position.


The catch peg is installed on the striking bead (frame side);
the counterpart where it engages is installed on the lock flying mullion.

Adjusting:

To adjust the torque: use a small slotted screw driver and adjust on the protrusion of the catch peg which is spring-operated.

Catch peg further out: larger torque

Catch peg further in: smaller torque

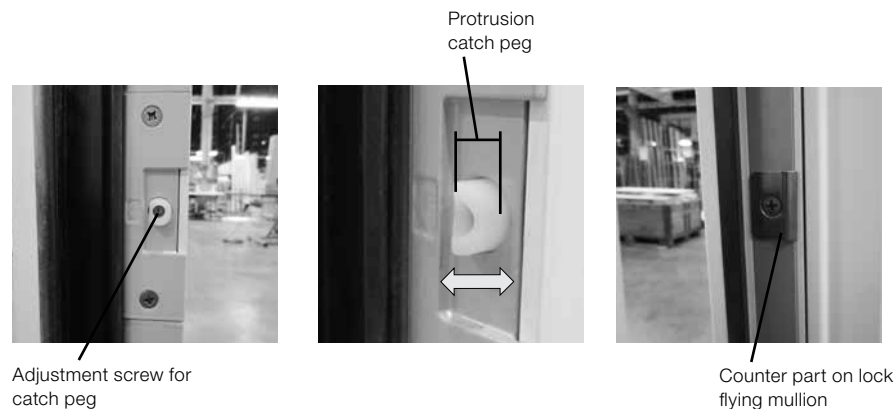


The additional catch in timber/aluminium front entrance doors cannot be adjusted.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Multi-point locks EVE and EVC (fully motorised)

The following types of operation can be set:

- Night operation (basic setting):
If the door is closed, the locking process occurs automatically
- Day operation:
No automatic locking occurs; the door is only kept closed via the lock latch.
- Conversion:
electrically via terminals 0 – 1 (E-switch on customer's premises) or via the button on the lock mullion.

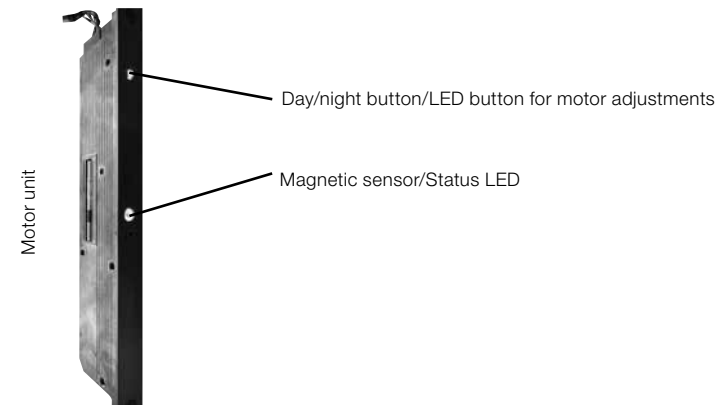

Day/night button / LED button for motor adjustments

This button has 2 basic functions:

- a) For fast switching between day (white) and night operation (blue) by pressing the LED-button very briefly (1 sec.)
 - b) To change motor adjustments
Pressing the LED-button for longer (8 sec.) brings you to a menu where different settings can be changed:
- Volume of motor hum
 - Status output of feedback contact (terminal 7 - "Alarm systems")
 - Day/night/detailed settings (interaction between LED-button and electrical terminal 0-1)
 - System services (reset to factory settings, sensor sensitivity,..)

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Menu options and adjustment values are indicated by different colours of the LEDs. Usually no changes need to be made from the factory setting. However, if other parameter values are required, adjust them according to the GENIUS (Type 2.2 B) operating instructions:

<http://downloads.siegenia.com/de/tuersysteme/genius2.2>

Magnetic sensor / status LED

Serves to recognise a closed door sash position (=start of locking process).

In addition, the status display for locking occurs according to the traffic light principle:

green: all OK

flashing green: all OK, one electrical opening impulse currently present

yellow or red: electrical or mechanical fault - reason or solution see link shown above

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES


Fully-electric locking VEV

The locking elements in the door can be adjusted three-dimensionally.

The rebate (lateral adjustment) can be adjusted using an SW7 open-end wrench.

Contact pressure and height adjustment

1. Remove both black magnetic covers from the locking element.
2. Loosen the two fixing screws for the locking pin (TX10).
3. Manually move the locking pins into the desired position.
4. Tighten the fixing screws and replace the magnetic cover.

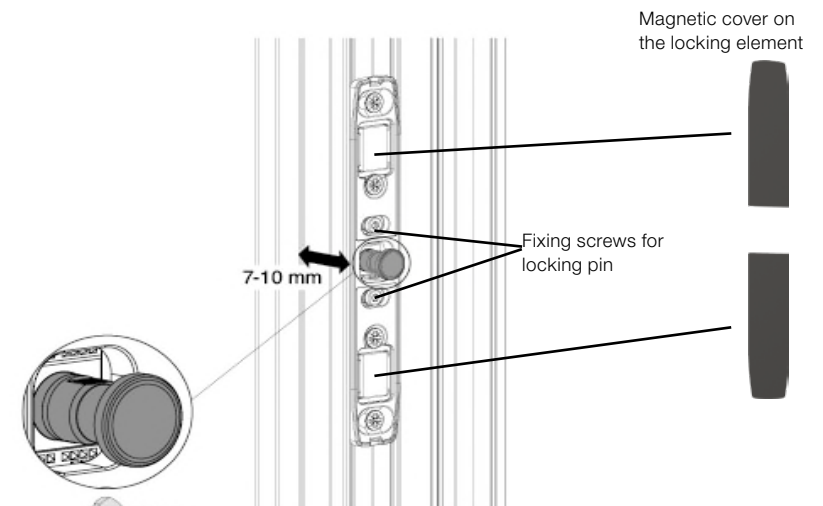

Only use the adjustment ranges to such an extent that you can still ensure proper functioning!

Adjust different operating modes in the “INSTINCT by MACO” app – see Chapter 2. OPERATION


3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Available adjustments for door hinges

Ensure that the adjustment ranges are only used to an extent that does not impair the functionality of the door!



Please note, especially with possible hinge safety mechanism
→ "risk of tension"

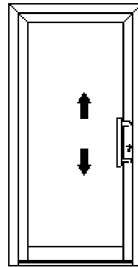


Height adjustment

Used to raise or lower the door sash.


Is carried out in such a way that the weight of the door sash is evenly distributed over all hinges or washers.

Closing pressure adjustment


Used to regulate how far the sash projects and therefore, adjusts the pressure placed on gaskets in the hinge area.

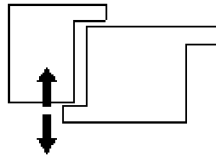

Side adjustment

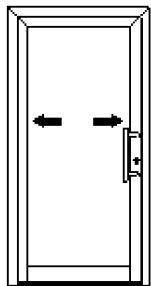

If all hinges are adjusted in the same direction, the rebate clearance (distance from lock mullion to locking plate) can be regulated.

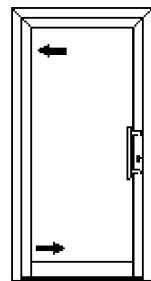

If the hinges are adjusted in opposite directions, this leads to the raising or lowering of the door sash on the lock side.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Adjustment process for aluminium front entrance doors




Exposed door hinge on aluminium front entrance doors

All adjustments must be carried out with a 4mm Allen key!

When adjusting three hinges, the centre hinge must be adjusted in such a way that no tension is created!

Process: remove the axle bolt of the centre hinge. Adjust the door sash with the top and bottom hinges. Adjust the centre hinge so that the axle bolt can be moved back in without applying force!

Height adjustment (-2/+3 mm)

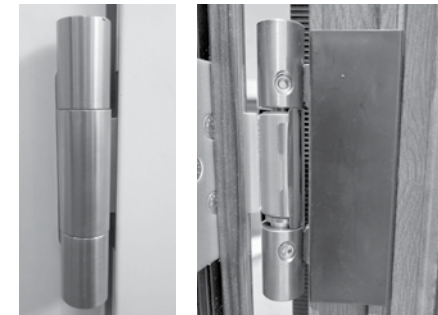


Stainless-steel hinge (without cover caps)



Loosen fixing screw.



Bring the height plate to the desired position with a turn to the right or left.

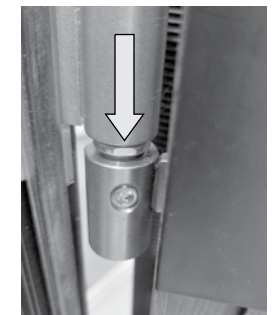

When fastening, the milled surface of the height plate must be parallel to the clamping screw.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES



Adjust the closing pressure (-1/+3 mm)

Remove the UPVC cover.



Loosen both locking screws.



Set contact pressure so that the gasket does not have too much pressure in the hinge area (sash overlap with AT500, AT510 and AT520: 14 – 15 mm, with AT530: 15 – 16 mm).

Counter both locking screws.

Re-attach UPVC cover.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES



Side adjustments (+/-2 mm)

Loosen both tension screws as far as possible.



Carry out the adjustment, ensure that there is sufficient distance between lock forend and locking plate: approx. 4 mm.

Counter both locking screws.

Re-attach UPVC cover.

For hinges that have the 3-part UPVC hinge cover caps (black, white, etc.), the lower cap parts must be removed to adjust the height.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Screw-on hinge for outward-opening aluminium entrance doors (AT500 outward-opening)

With three hinges, the middle hinge must be adjusted so that there is no tension.




Height adjustment (-1/+5 mm)




Lift and lower the sash with Allen key SW6

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Set contact pressure (+/-1 mm)

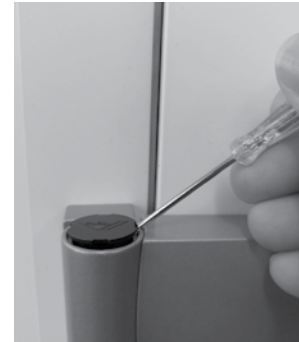


Remove UPVC cover with screwdriver.

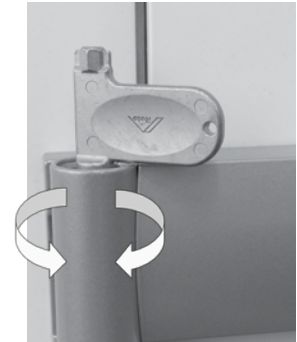


Set contact pressure with the adjustment wrench included in the delivery.

Side adjustment (-4/+7 mm)

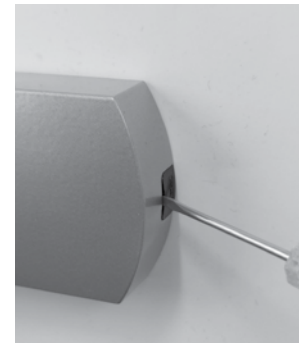

Remove UPVC cover with screwdriver.

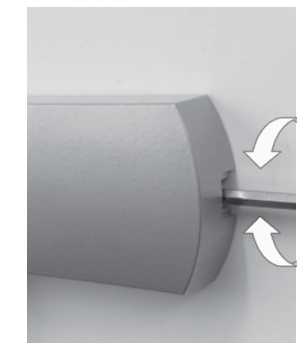


Side adjustment with Allen key SW4.

Re-attach UPVC cover.

Adjustment process - concealed door hinge on aluminium front entrance doors




To adjust the sash height (+ 4 mm/- 2 mm)

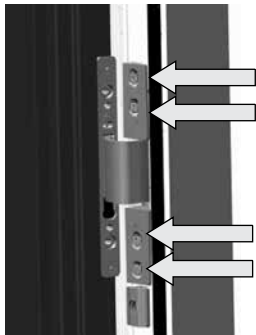

1. Loosen the countersunk screws (arrows) lightly on the frame on all hinges.
Tool:
Torx 30 screwdriver




2. Bring the sash to the required height via the threaded pin (arrow)
Tool:
4 mm Allen key

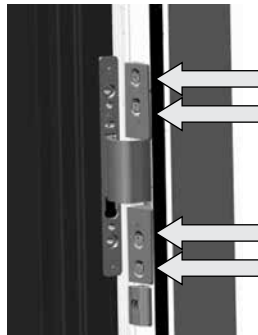


3. Tighten countersunk screws (arrows) again on frame on all hinges.


To adjust the closing pressure (+/- 1.2 mm)

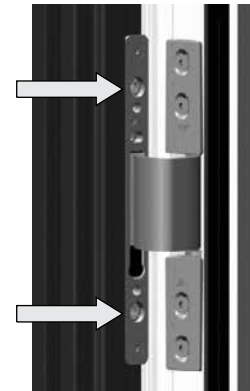

1. Loosen the countersunk screws (arrows) lightly on the sash hinge.

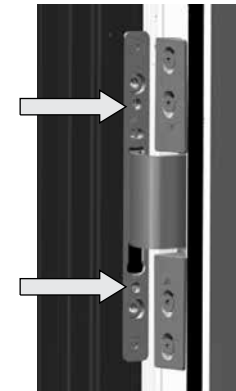

2. Adjust the required closing pressure via the eccentric screw (arrow).

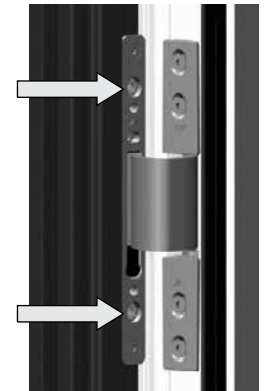


3. Tighten countersunk screws (arrows) again on the sash hinge.

Tool:
6 mm Allen key with short arm

Tool:
6 mm Allen key with short arm

Side adjustments (+3/-2.3 mm)

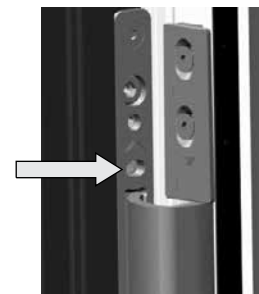

1. Turn screw (arrow) into respective direction for adjusting function clearance (rebate clearance).
Tool: 6 mm Allen key with short arm

Adjust the middle hinge of three hinges in such a way that no tensions occur.

Specifically for timber/aluminium doors:




Adjust the bottom and top closing pressure and correct any warping on the lock side

In the outer rebate area (overlap) on the lock side, there is a tension rod which can be used to correct warping in the door leaf of up to 4 mm in both directions.

1. Remove the cover cap.
2. Adjust the tension rod with a 6 mm Allen key. By turning clockwise, the rod is tensioned and the sash ends are bent towards the inside, by turning anti-clockwise, the rod is lengthened and the sash ends are bent towards the outside.

ATTENTION: do not exceed a torque of 35 Nm! Danger of damage to door leaf.

3. Replace the cover cap.

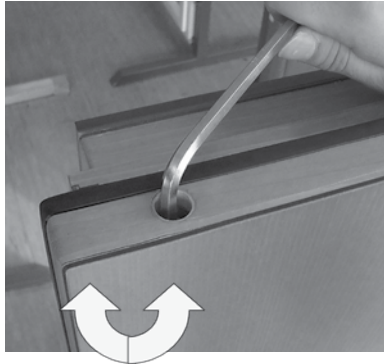

Adjustment process for a door hinge for timber/aluminium front entrance doors with exposed hinges

Carry out all adjustments with a 4 mm Allen key!



Adjust the centre hinge in such a way that no tension is created!

Height adjustment (-2/+3 mm)




Remove the bottom cover caps.



Loosen the fixing screws.



Bring the adjustable support to the desired height by turning to the left or to the right and correct the other hinges too.

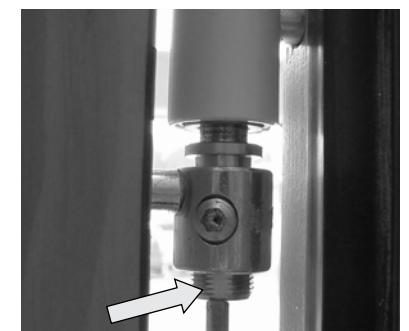

When attaching, always use the milled surface of the adjustable support!



Closing pressure and side adjustment

On rare occasions, side adjustments or adjustments to the closing pressure of a sash or the gaskets are necessary. Unhinging the door sash is necessary.

To un hinge the door sash

1. Loosen the fixing screw for the hinge bolts (top Allen screw) on all hinges.


2. Press the hinge bolt out from underneath with a 4mm Allen key. Start at the bottom hinge. Unhinge the door sash and put aside.



Be careful when lifting! The element may weigh over 100 kg possible!

3. Put the unhinged door sash carefully on to a pressure-resistant, soft surface (e.g. polystyrene from packaging) to avoid damage!

When leaning it, ensure it stands securely and also use some padding towards e.g. a wall!

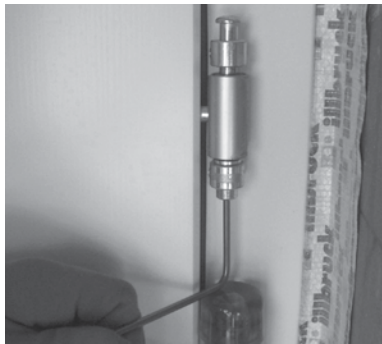

To adjust the closing pressure

To change the closing pressure of the door sash on the hinge side, the hinge parts on the frame are adjusted when turning. Ensure that hinges are adjusted evenly, otherwise bolts will be subjected to tension and high wear and tear and creaking sounds will result. Both hinge parts always need to be turned a full 360° inwards or outwards, otherwise they will be wrongly positioned.



Side adjustment

To carry out side adjustments to the door sash, the hinge parts of the sash must be turned inwards or outwards with a screwdriver or similar. This moves the position of the door sash to the side. Ensure that hinges are adjusted evenly, otherwise the bolts will be subjected to tension and high wear and tear and creaking sounds will result.



Mounting the door sash

Bring the door sash into position and re-insert hinge bolts at the bottom, top and centre. It is best to begin with the bottom hinge bolt, then insert the top and the centre one tension-free.



When inserting the hinge bolt, ensure correct orientation. The flattened part must be in the area of the Allen screw.

Tighten all Allen screws again and attach the cover caps.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

Adjustment process for door hinges in timber/aluminium front entrance doors with concealed hinges

All adjustments must be carried out with a torx T20 or a 4 mm Allen key!



Adjust the centre hinge in such a way that no tension is created! The door panel does not need to be unhinged for adjustments!

Mount door panel



Fixing screws in unhinged delivered sashes are screwed into the frame; remove these.



Bring the door hinges into a 90° position and lift the sash to the frame.
Attention - heavy elements!



Slide the hinges without tensioning into retaining pockets and fasten each hinge for the moment with a fixing screw.



Use the remaining three fixing screws for each hinge.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES



Height adjustment

Frame parts of hinges at the back are equipped with a tooth system. If all fixing screws (4 per hinge) are loosened far enough with a torx T20, the height of the sash can be adjusted. Put the door at the desired height and fasten all the fixing screws. Do not subject hinges to tension, to avoid creaking sounds and heavy wear and tear.



To adjust the closing pressure

If the fixing screws (4 per hinge) are only loosened slightly, the closing pressure on the hinge side of the sash can be increased or decreased on the height adjusting tooth system.

Fully loosen the screws on the centre hinge and carry out the desired adjustments on the top and bottom hinges. Tighten all the fixing screws again.



Side adjustment


To adapt the gap size between the frame and the sash, adjust the hinge with a 4 mm Allen key. No fixing screws need to be loosened for this. Two screws must be readjusted for each hinge. Operate the screws alternately to avoid tensioning the hinges.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES


Mounting and dismounting lever handles (for aluminium and timber/aluminium front entrance doors)

Lever handle sets PD

The new generation of Hoppe handle sets is attached to the square handle pin using an integrated clamping system (Hoppe quick-release pin).

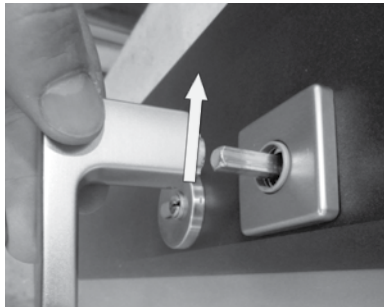

To attach the lever handle:
Put the cover plate in place and slide the lever on to the spindle until it sits tightly. The lever handle is kept in place via a preloaded metal spring on the spindle.

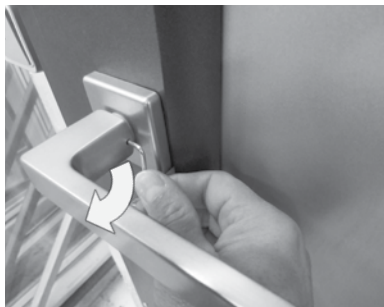

2. Turn the special tool by about 90° to loosen the clamping system.

The protection sets (PSD.., PZD.., PSK.., PZK..) have also been converted to the quick-release system. Disassembly of the handle also with an Allen key.



To remove the lever handle:
1. Insert the special tool supplied fully into the side hole at a slight angle to the cover plate.



3. Pull the lever off the spindle.


3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES

3.5. ADJUSTMENT POSSIBILITIES, WINDOW SHUTTER



Adjustment of the reveal (soffit) depth

The reveal depth is adjusted via the hinge for a reveal depth of 60 - 230 mm.

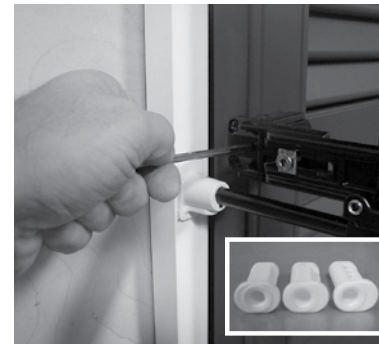

Side adjustment (mounting of window shutters)

Side adjustment is carried out via hinge casings 1.5 and 3 mm. Side adjustment is only possible via the spindle for a reveal depth of 190 - 230 mm.



Adjustment of the hinge stabiliser

The adjustment screw must be used to press the window shutter against the stopper buffer/wall, then the clamping screw at the top must be tightened.

3. ADJUSTMENTS | ADJUSTMENT POSSIBILITIES



3.6. INSECT PROTECTION

Sliding frame

1. To mount, press the sliding frame so far upwards into the top sliding rail, until the sliding frame can be positioned into the lower sliding rail.



2. Then push the fixing part up and attach it with screws on both sides.



Turn frame

Before unhinging, lift the pins and remove them, then the sash can be taken off towards the front.

4. CLEANING | CARE | MAINTENANCE

Internorm products are low-maintenance and easy to clean and care for. Regular maintenance conserves value and extends the life span of windows and doors. In Austria, these necessary measures are documented in the ÖNORM B 5305. This ÖNORM contains criteria for assessing the state of a window as well as details and specifications concerning the implementation and instigation of maintenance. If you adhere to the following cleaning, care and maintenance tips, you will be able to enjoy your Internorm products for a long time. In order to retain an immaculate surface, smooth-running hardware and well-closing gaskets, please take note of the following care tips.

4.1. GENERAL INFORMATION

Do not use cleaning products of unknown composition. If you are uncertain about the effects of a cleaning agent, test it on an inconspicuous, concealed area. Please be aware that cleaning agents which cause surprising cleaning results without any special effort might often lead to long term damages.

Outside surfaces are not only exposed to the weather, but also to the increased effects of smoke, industrial fumes and aggressive flying dust. Deposits of these substances combined with rain or condensation can impair surfaces and alter the decorative appearance. We recommend regular cleaning of the outside surfaces, depending on the degree of staining, in order to prevent long term settling of deposits. The sooner stains are removed from the surface, the easier it will be to clean them.



Micro-fibre cloths contain substances and fibre parts which can destroy the surfaces of glass, profiles and gaskets. Micro-fibre cloths are therefore unsuitable for cleaning windows.

4. CLEANING | CARE | MAINTENANCE

4.2. HARDWARE



All hardware parts must be checked at least once a year for tight fitting and wear and tear. If necessary, fixing screws must be tightened or faulty parts replaced by authorised personnel.

Furthermore, all gliding parts and moveable hardware parts must be lubricated once a year (acid and resin-free grease or oil). Very frequently operated window or door elements must be lubricated more often! Non-observance of these instructions can cause damage to property or injury to persons.

Hardware should only come in contact with those care and cleaning agents that do not impede corrosion protection of hardware parts.




Lubricating points for windows and window system doors:

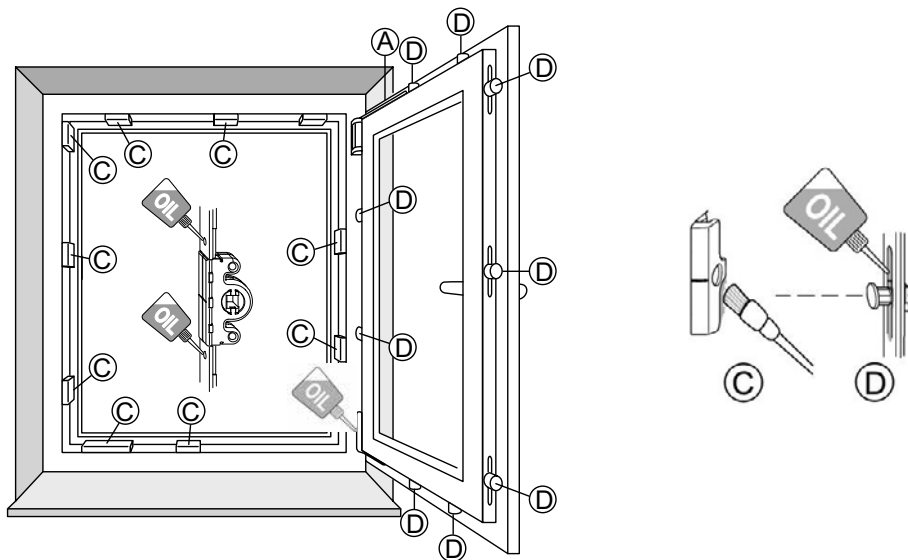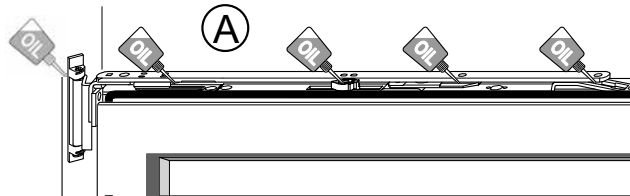

4. CLEANING | CARE | MAINTENANCE

Lubricating the sash bearing of fully concealed hardware:

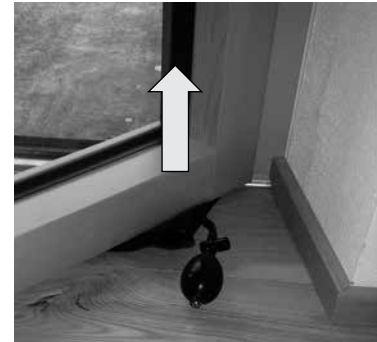

Lift the opened sash e.g. with an air wedge packer until the lower bearing point bears no weight.



Lubricate the bearing point between the sliding surfaces with high-quality lubricant (e.g. Teflon oil).


Maintenance of I-tec Secure

All joints of bearing parts, top and bottom, must be lubricated.




Corner bearing bottom


4. CLEANING | CARE | MAINTENANCE

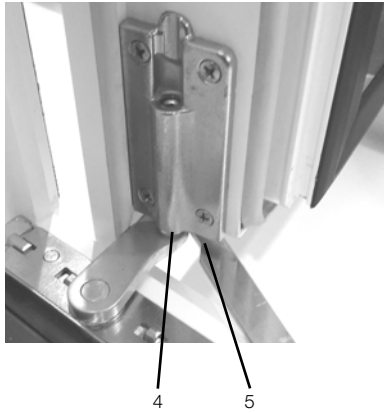

Bottom sash bearing

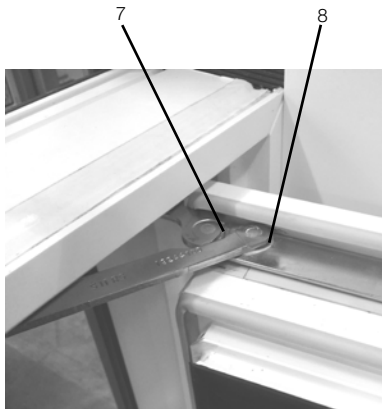

Stay arm, turn bearing top

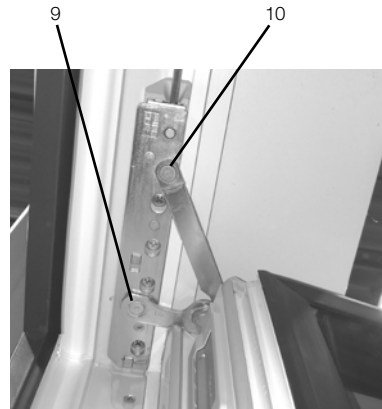

4. CLEANING | CARE | MAINTENANCE

If necessary, lubricate sliding areas of locking flaps.






Open the sashes, press the faulty safety device on the gear mechanism, and move the handle in the locking position. This will open the locking flaps.




If necessary, lubricate the sliding areas.

Maintenance of the concealed hardware (Top-Star)

Stay-arm and corner bearings must be greased at least once a year at all joint points and friction surfaces. The lubrication points should be coated with resin-free and acid-free grease.

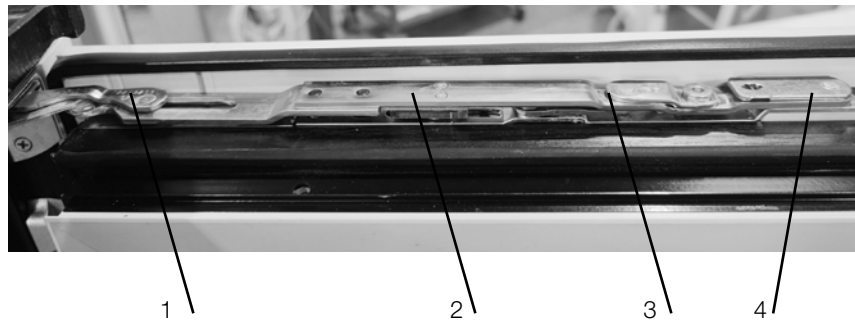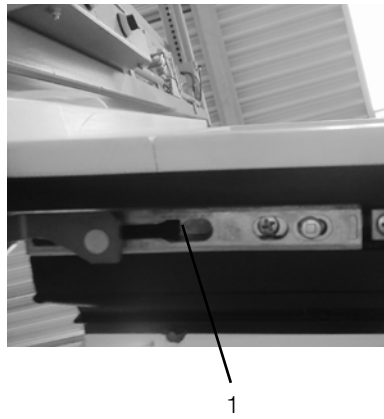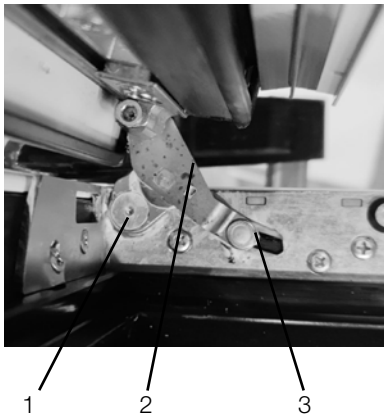


Lubrication points for parallel sliding elements:

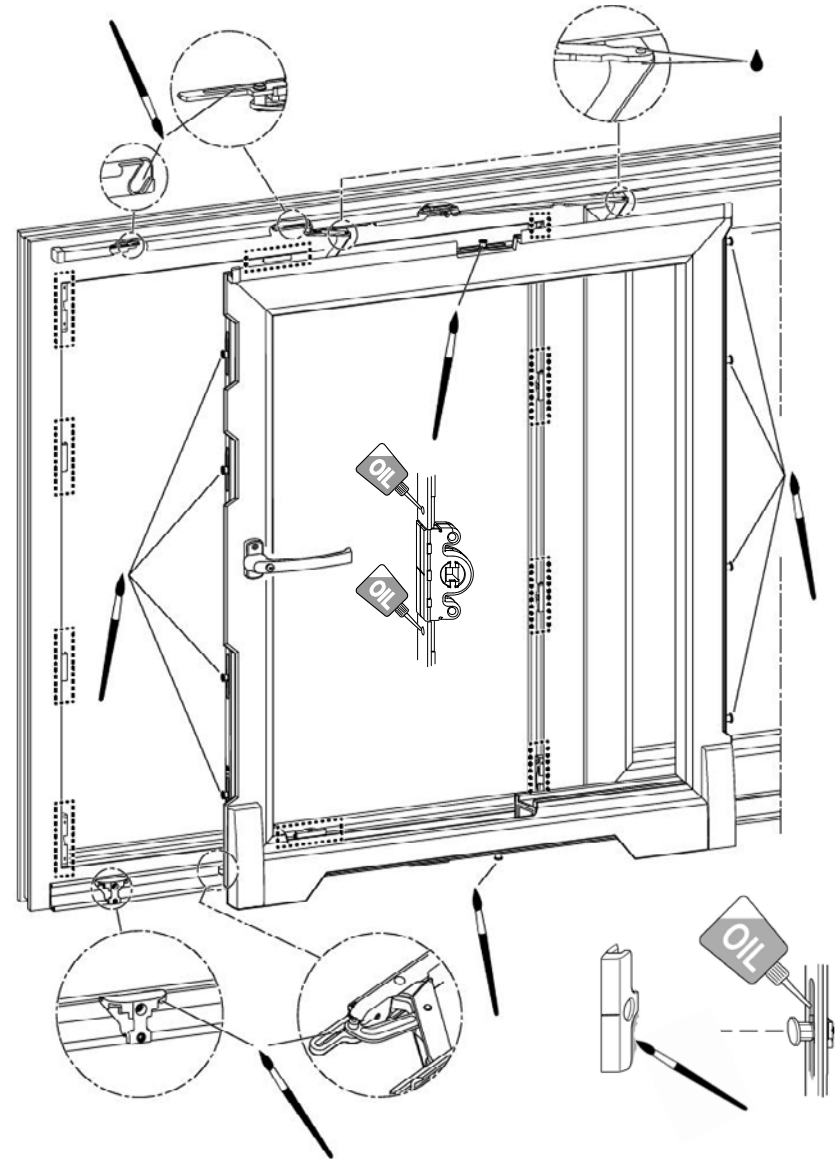

4. CLEANING | CARE | MAINTENANCE


Lubrication points for lift-sliding doors:

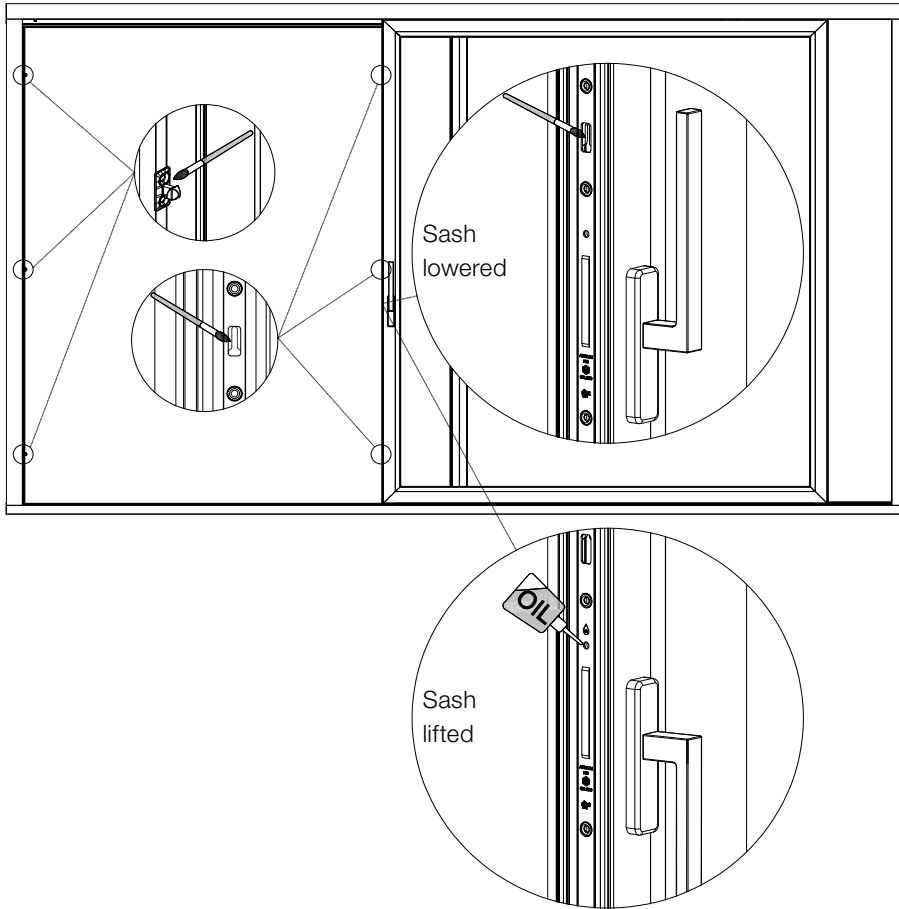

4. CLEANING | CARE | MAINTENANCE

Particular care must be taken when cleaning electronic hardware parts (e.g. the window control or the plug connection between the sash and the frame of electric blinds). These parts need to be protected from dirt and kept clean to avoid disruptions in signal transmission, especially during the construction phase, but also during regular use of the window.

With I-tec Secure, locking corner drives are additionally secured with a pin (grub screw) which lies under the middle gasket. Due to the alternating load when locking the sash this pin can come out through the middle gasket and needs to be screwed in flush to the bottom of the gasket groove using a 2.5 mm Allen key. Otherwise the window frame might be damaged.

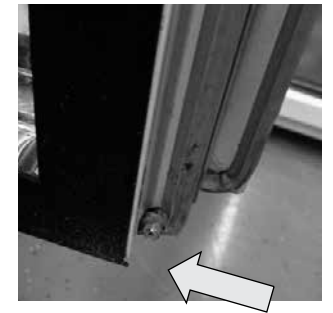

4. CLEANING | CARE | MAINTENANCE

Maintenance of hardware parts on front entrance doors

As with windows, check all hardware parts of front entrance doors at least once a year for tight fitting and wear and tear. Depending on need, fixing screws must be tightened or faulty parts replaced by qualified personnel.

Multi-point locks are generally maintenance-free and do not need to be lubricated. (Exceptions are MVAM, EE and VEV)



The heavily used roller latch must be replaced every 50,000 operations (maintenance part – part no. 85425). To do so, the closing bead must be unscrewed. With an assumed average use of 20 door openings per day, this corresponds to a maintenance interval of 7 years.



Stiffness of locks is to be avoided. This leads to increased loads on the multi-point lock which can considerably reduce its life span.

How to determine stiffness:

a) for mechanical locks MV, MVB, MVC, MVAM

Stiffness can be determined with each operation using the key.




b) with motorised locks EE, EVC, EVE

Check the electromechanical locking for stiffness at least twice a year with the key.

If stiffness is determined, firstly check the door adjustment - see chapter 3. Adjustments and Adjustment possibilities

4. CLEANING | CARE | MAINTENANCE

If the door is correctly adjusted and the stiffness has not been remedied, lubricate the main lock and the additional boxes. Spray a light mist (1 to 2 sprays) between the locking elements and the flying mullion with a PTFE spray.

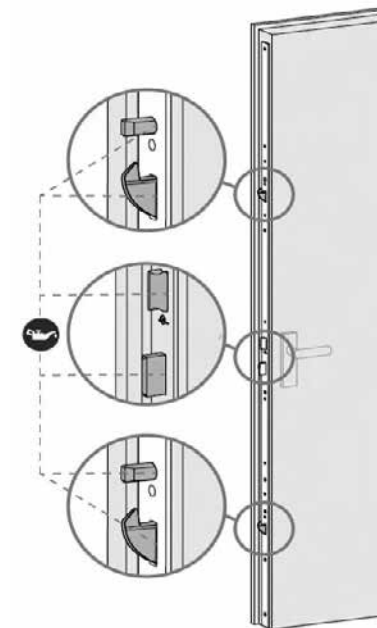

4. CLEANING | CARE | MAINTENANCE

An additional way to reduce stiffness is to lubricate the UPVC support at the back on the frame side with a light spray (1 spray).



Specific characteristics of MVAM and EE locks.
These are equipped with trigger bolts for the locking process.
Both trigger bolts must be lubricated once a year.



Only use oil-based PTFE sprays H1!

The following spray greases are recommended:

- Internorm HARDWARE FIT
- HIGH-TEF Oil INNOTECH
- Staloc PTFE-Spray
- Presto PTFE Lubrifiant
- Ballistol Universal Oil
- Nigrin PTFE
- Bauhaus Profi DEPOT
- E-COLL PTFE SPRAY with NSF H1 approval

4. CLEANING | CARE | MAINTENANCE


Maintaining the fully-electric locking VEV

The latches should be greased regularly along the lock contours with lubricating grease or technical Vaseline, using a brush or similar.



Never use contact spray, rust remover or liquid lubricants – you won't be able to achieve the desired lubricating function with these – they can penetrate the locking components, impair the functionality and thereby cause damage.

Greasing should take place after 25,000 operating cycles or once a year (whichever occurs first)

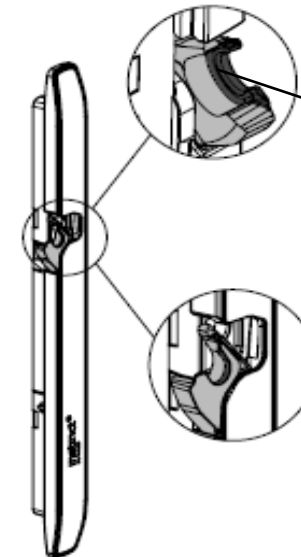

Be sure to grease the lock contours!

4. CLEANING | CARE | MAINTENANCE

4.3. CLEANING TIPS FOR GLASS SURFACES/GLASS JOINTS AND GLASS CORNERS

Dirty glass surfaces/glass joints/glass corners can be wet cleaned using water, a sponge, a cloth, etc.

Common glass cleaners without scouring agents may be added to the water.

Persistent stains such as paints or tar droplets should be removed with methylated spirits, acetone or petroleum ether. Glass surfaces should then be wet cleaned again.

Metallic and abrasive items (e.g. razor blades, steel wool, cleaning fleeces ...) must not be used!



Do not use alkaline cleaning lye, acids or cleaning agents containing fluoride to clean glass surfaces.



Protect the glass surface with suitable cover foils from

- plaster splatters, cement, untreated concrete surfaces, fibre cement boards
- flying sparks or welding beads from angle grinders

4. CLEANING | CARE | MAINTENANCE

4.4. GASKETS

All gasket profiles must be cleaned and lubricated at least once a year to retain functionality. We recommend the care product for gaskets.

This care product for gaskets preserves the pliability of the gasket and prevents it from becoming prematurely brittle. Please ensure gasket profiles are not damaged and do not come into contact with solvents.

Generally, gaskets should only be cleaned with water and possibly a little drop of dishwashing liquid.



Permitted cleaning agents

- Alkaline cleaning agents (soapy solutions)
- Mixtures of water and alcohol

However, concentration, exposure time and ambient temperature play an important role which means that the material can possibly be affected by the cleaner if the concentration is too high.

Prohibited cleaning agents

- Cleaners containing chlorine or cleaners with peroxides can damage the material over a longer period of time or could lead to discolouration.
- Oils, greases, substances containing oil and grease and petrol can lead to a cracked and unsightly appearance.

4.5. UPVC SURFACES

Two types of Internorm care products are available for cleaning uPVC surfaces. One cleaning agent for hard uPVC surfaces, and one for décor and I-tec Decor finishes. Harsh, aggressive and dissolving cleaning agents, as well as direct sunlight during cleaning, must be avoided.

For persistent dirt, use standard domestic cleaning agents based on tensides.



Intensive cleaner Decor cleaner

4. CLEANING | CARE | MAINTENANCE

Suitable agents:

Washing-up liquid; mild, neutral universal cleaner; alcohol-free glass cleaner; clear water.

Unsuitable agents:

Abrasive agents or chemicals such as acetone, petrol, acetic acid, nail varnish remover, alcohol or similar (also not as ingredients in cleaners); cleaners with orange / lemon aroma; ammoniac or sulphurous agents.

Rinse window frames, including gaskets, with clear water! If a mix of dirt, cleaner and water stays behind on the frame, water evaporates and the remaining cleaner-dirt-combination can burn into the surface.

4.6. TIMBER SURFACES WITH TIMBER/ALUMINIUM ELEMENTS

We recommend using mild cleaning products such as diluted washing-up liquid or soapy water to clean **inside** timber surfaces. As timber surfaces on the inside are not exposed to weather (wear through rain and sunlight), coating is not necessary. Avoid scouring, acidic and solvent cleaning products. Only use soft cleaning cloths to avoid scratching the paint surface.

Window cleaning products contain small traces of alcohol and ammonia. These products are suitable for cleaning glass panes as well as the internal timber frame. After cleaning, dry timber with a dry, soft cloth - long exposure to alcohol can soften the varnished surfaces.

4. CLEANING | CARE | MAINTENANCE

4.7. TIMBER FINISHES (SD10) FOR ENTRANCE DOOR DECORATIVE ELEMENTS

The real-timber surface on the outer surface of the decorative element has been treated with a special hard wax made by Remmers.



In order to maintain the look of the timber surface, it is essential to treat it on a regular basis.

This should be done no sooner than 12–15 months after the delivery of the door, and then at least once a year.

However, the required maintenance interval can be significantly shorter if exposed to extreme weather conditions.

A suitable care product is: Remmers Aqua Hard Wax Seal HWS-712

(manufacturer's Item No. 529101)

Tannic acid problems

When timber containing tannin, such as the SD10 Antique Wood real oak panel, is exposed to outside moisture, there is a risk that the natural tannic acid contained in the timber will leak and cause staining.

Variable weather conditions or exposure to iron dust (from nearby railway lines or construction sites) increase the risk of tannin staining.

It is only an impairment on the appearance, not damage to the timber - **therefore no cause for complaint!**



A timber surface altered by tannic acid should be treated quickly with a suitable stain remover, which will significantly improve the appearance.

Many tannin stain removers are available in specialist stores, e.g. Woca tannin spot remover etc.

A pH neutral soapy water solution diluted 1:5 is also suitable for a periodic clean. Lightly dampen a cloth in the solution and gently wipe the timber surfaces.

4. CLEANING | CARE | MAINTENANCE

4.8. ANODISED OR POWDER-COATED ALUMINIUM SURFACES

Anodising and powder coating are considered refinements of exterior aluminium surfaces which are especially durable and decorative. In order to retain the decorative appearance of these construction parts for decades and to reduce corrosion impact, surfaces need to be looked after at least twice a year with adequate cleaning and surface conservation products.

Depending on the degree of staining (strong stains), care and cleaning intervals should be shortened accordingly. In the outsourced cleaning and care of buildings, processes are necessary that comply with the current quality guidelines for façade cleaning (GRM).

4.8.1. REQUIREMENTS AND PROCESS OF CLEANING ALUMINIUM SURFACES

Object conditions

Do not clean surfaces in direct sunlight. The surface temperature must not exceed 25°C. Use suitable cloths for cleaning, which do not scratch the surface. Refrain from tough scrubbing.

Pre-cleaning

Before applying special cleaning or conserving products, existing stains should be removed in a pre-cleaning process. Use only clean water for this, possibly with small amounts of neutral cleaning agents (only pH neutral cleaning agents with a pH value between 5 and 8), e.g. washing-up liquid in normal concentration. These cleaning products should not be warmer than 25°C. Do not use steam cleaners.

4. CLEANING | CARE | MAINTENANCE

Conservation

Use Eloxal Polish (polish for anodised surfaces) or a Monowax X405 cleaner for stronger staining, which can serve for conservation at the same time. It forms a film on the surface of anodised or coated aluminium parts and thereby repels dirt and water again for longer. This type of conservation however, needs to be renewed from time to time.

Eloxal Clean for anodised aluminium surfaces

Monowax X405 Cleaner for smooth, powder-coated aluminium surfaces

These general cleaning products should only be used after a successful pre-cleaning process.

4.8.2. CLEANER FOR ANODISED SURFACES

When cleaning very dirty anodised surfaces, do not use scratching or scouring products. Persistent stains such as tar, lacquer or similar compounds can also be removed with solvents, e.g. benzine or cellulose thinner (only for local application and with corresponding subsequent treatment). Observe respective safety and handling instructions for each product. Gaskets and painted surfaces must not come in contact with these products.

4.8.2.1 CONSERVATION AGENT FOR ANODISED SURFACES

Eloxal Polish Cleaner

This cleaning and conservation agent is a care product on an emulsion basis.

Application range

The Eloxal Polish Cleaner and Conservation agent is well suited for stained anodised aluminium surfaces, which - for decorative reasons - should be cleaned several times each year.

Cleaning instructions

Shake the bottle well before use. Apply Eloxal Polish Cleaner thinly with a soft cloth and over a wide area. Various stains, as well as dark anodised elements should be evened out with polishing movements.



4. CLEANING | CARE | MAINTENANCE

4.8.3. CLEANING AGENT FOR POWDER-COATED SURFACES

Solvent containing, acidic and alkaline cleaners affect powder coated surfaces and must not be used just like scratching or scouring cleaning agents.

We recommend aroma-free cleaning benzine or isopropyl alcohol (IPA) for removing persistent, fatty, greasy dirt. These cleaning agents must only have short contact with the surface and be rinsed off with clear water.

4.8.3.1 CONSERVATION AGENT FOR POWDER-COATED SURFACES

Monowax X405 light-blue 1000 ml

This cleaning and conservation agent is a care product on an emulsion basis.

Application range

Monowax X405 cleaner and conserver is suitable for basic cleaning of newly installed powder-coated surfaces and for lightly soiled powder-coated aluminium parts. The conservation agent serves to attach a film with a dirt- and water-repellent effect to the surface for a certain time. It improves the appearance of the surface. Renew conservation from time to time.

The care product for powder-coated aluminium surfaces is also suitable for wet-painted surfaces (e.g. painted entrance door fillings).

This care product is not recommended for fine-structured coatings (HF and HFM) as polish residues can remain in grooves. As these surfaces are manufactured with highly-weather resistant powder coating, cleaning with clean water with cleaning agents added is sufficient or use special cleaner cl-360.110.

(P/no. 36856 - 200 ml)

Cleaning instructions

Shake the product well before use.

Apply Monowax X405 thinly with a soft cloth and over a wide area. Light stains, as well as dark anodised elements should be evened out with polishing movements.



4. CLEANING | CARE | MAINTENANCE

4.9. CLEANING INSTRUCTIONS FOR STAINLESS STEEL

Stainless steel is used in the building industry primarily where aesthetics and hygiene are the main focus.

As it cannot be avoided that a rust film or flash rust may deposit on the surface, this often leads to the erroneous assumption that stainless steel has rusted.

We recommend treating surfaces with visible stains or corrosion using standard stainless steel cleaners. These can be obtained in respective specialist shops.

4.10. CARE AND MAINTENANCE OF I-TEC VENTILATION


The ventilator should be regularly checked and maintained. Free machine from dirt and check clamping screws for tight fitting. Test the ventilator with a test run. Maintenance and repair of parts inside the ventilation housing are to be carried out exclusively by authorised personnel. Opening the ventilation housing which lies under the cover leads to loss of warranty and exclusion of liability.

Please use a soft, slightly damp cloth to clean housing parts and the ventilation grid. Please do not use corrosive chemicals, aggressive cleaning solutions or solvents, to prevent damage to the surface. Protect your ventilator permanently from water and dirt.

4.11. SPECIFIC WARNINGS FOR TIMBER/ALUMINIUM ELEMENTS

Natural timber always tends to adapt to its surrounding humidity. This characteristic remains the same throughout the entire life cycle, from the living tree to the processed timber element. Protect your windows from excess construction humidity, especially during the construction phase. This applies especially to winter construction sites, where large amounts of water occur due to plastering and screed works in closed buildings. Ensure sufficient ventilation during the construction phase. Excessive humidity over a longer period of time can cause severe damage to corner connections and on the surface through the swelling of timber profiles.

5. COMFORT

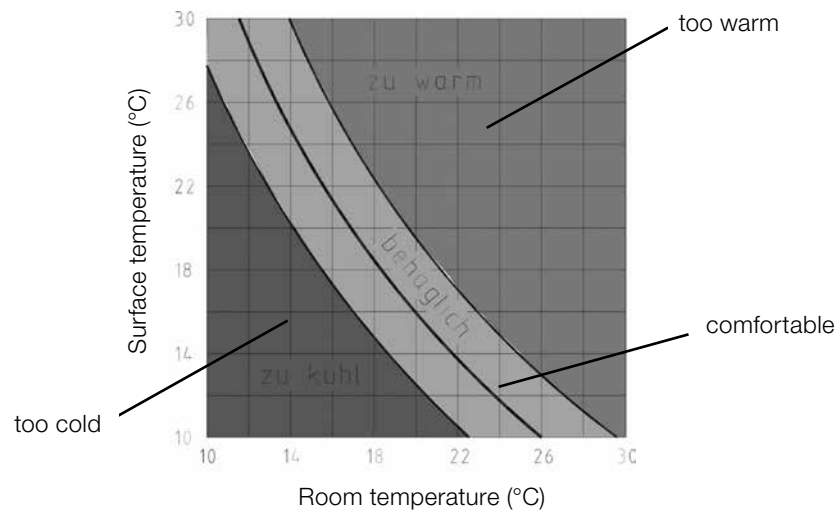

Not only room temperature and air humidity determine how comfortable and cosy a room appears.

Temperature differences between room air and surfaces enclosing the room, as well as corresponding radiation asymmetries and air movements (room air turnover), are also related to this.

Example: if a wall surface has a temperature of 18°C and the room air temperature is 20°C, an average person will feel more comfortable than with a wall temperature of 15°C and an air temperature of 24°C. This means that the temperature difference between room air and enclosing surfaces should not exceed 2°C.

In rooms with relatively large temperature differences between walls and room air, the warm air cools down at the walls, sinks down to the floor, and results in a pool of cold air. This constant air movement results in the impression of a draught (room air turnover).

Therefore, good thermal insulation of enclosing surfaces is important!

6. VENTILATION

CORRECT VENTILATION!




The minimum oxygen demand for humans is approx. 1.8m³/h per person. In order to accommodate pollutants and odours, the amount of fresh air needed hygienically is 10 to 25 m³/h per person.

The amount of air inflow necessary to remove moisture depends on the amount of moisture occurring, the indoor climate, the outdoor climate and the size of the room.

People in living and work spaces create water vapour. The water vapour occurring originates from the breath of the people present, evaporating from watering flowers, bathing, showering, cooking and similar processes.

The amount of water vapour that may occur is demonstrated in the explanation below.

Therefore, a 3-person household accumulates approx. 180 litres of water per month; this is more than one bathtub full of water.

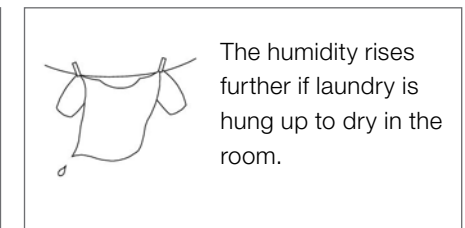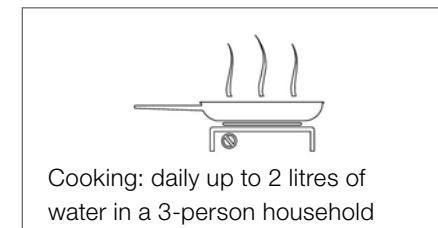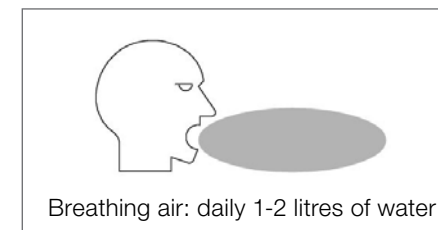


If the water cannot get outside sufficiently through ventilation, the humidity level in the air rises, which leads to condensation and can then lead to mould.

6. VENTILATION

Internorm windows have very good thermal insulation characteristics and good air tightness. This protects you from bothersome draughts, cuts down on heating costs and keeps out disturbing noise. However, it also necessitates more conscious ventilation.

Correct ventilation is immensely important. It ensures constant oxygen supply for breathing air as well as carrying off pollutants which accumulate when ventilated insufficiently. Furthermore, with correct ventilation you can avoid condensation as well as the danger of mould developing.

Which ventilation options are there?

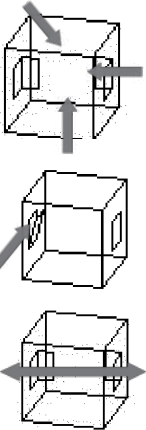

The diagram shows three 3D wireframe boxes representing rooms. The first box has arrows pointing in and out from the walls, representing self-ventilation. The second box has a window tilted upwards, with an arrow pointing in from the window, representing constant ventilation. The third box has two windows on opposite walls, both fully open, with arrows pointing in from one and out from the other, representing maximum ventilation.

Self-ventilation:
“Ventilation“ with closed windows and doors due to permeability of the building shell.

Constant ventilation:
Constantly slightly opened windows due to gap ventilation or via tilt hardware.

Maximum ventilation for a short time:
Ventilation with fully open windows on opposite sides of a room.

It is recommended to carry out maximum ventilation for 5 minutes several times during the day.

This is most effective if windows on opposite sides of the room can be used for ventilation.

This maximum ventilation, several times a day, will ensure the desired air exchange and take out humidity without affecting the comfort. The room temperature will fall for a few minutes, but the “heat storage“ in walls, ceiling and floor will cool down only minimally in this short time. The fresh air will heat up again quickly, the energy loss is minimal.

6. VENTILATION

WHAT DO I NEED TO KNOW?

Air exchange through gaps in closed windows is not sufficient for adequate reduction of humidity and hygienically necessary fresh air supply.

Depending on the usage of the room and on the amount of humidity produced, it is recommended to ventilate regularly through constant ventilation or maximum ventilation for a short time.

Transporting humidity into cooler rooms within the building should generally be avoided. If this is not possible, please take this into consideration when ventilating.

In rooms with open fireplaces (boilers, open fireplaces, oil stove, gas stove etc.) a constant supply of fresh air must be ensured.

Construction moisture leads to increased strain on window profiles. In order to avoid surface damage or swelling of timber profiles, ensure sufficient ventilation!

Under extreme demands, e.g. in wet rooms, indoor swimming pools or rooms with chemicals, adapted heating and ventilation systems might become necessary.

7. WARRANTIES

Internorm provide services and warranty rights for the end customer as set out below:

The requirements set out in this document do not exclude or override the statutory rights that may be available to you against your supplier and/or installer of the Goods. Issues or concerns arising in relation to the operation or use of Goods manufactured by Internorm should be taken up in the first instance with your Distributor or, if different, any installer of the Goods. Internorm have committed to supporting our Distributors in dealing with issues arising associated with Internorm Goods. Please see section 7.1 for more details on your statutory rights and how to make a warranty claim.

Below are the warranties which Internorm offer in relation to our Goods:

10 year warranty on weather resistance against unnatural change of colour and cracks in surfaces of white UPVC window and door profiles, except for mitre cracks. When assessing weather resistance, the change in colour, according to test system corresponding to DIN EN 513, must not be greater than level 3 on the greyscale according to DIN EN 20105-A02. There is no warranty on the change of appearance of surfaces as a result of dirt and/or insufficient care.

10 year warranty on weather resistance against unnatural change of colour and cracks in surfaces of inside foil covered UPVC window and door profiles, except for mitre cracks. When assessing weather resistance, the change in colour, according to test system corresponding to DIN EN 513, must not be greater than level 4 on the greyscale according to ISO 105-A02. There is no warranty on the change of appearance of surfaces as a result of dirt and/or insufficient care.

10 year warranty on weather resistance against unnatural change of colour and cracks in surfaces of anodised (a form of metal coating) or powder coated aluminium window and door profiles.

Minimum value for remaining gloss is the gloss level determined according to DIN EN ISO 2813, which is at least 30% of the original value.

7. WARRANTIES

Exempt from this warranty are corrosions due to environmental impacts, such as fitting window and door elements close to the sea (salt in the atmosphere), close to roads with gritting or in an atmosphere polluted with heavy industry pollutants. There is no warranty on the change of appearance of surfaces as a result of dirt and/or insufficient care.

The above 3 warranties only apply to surfaces listed in the Internorm aluminium colour swatch, the Internorm RAL colour swatch or the Internorm hi-res colour swatch.

10 year warranty against condensation between the sealed panes of insulating glass. The guidelines applied for general visual assessment of mirrored insulating glass are those of the Federal Guild Association of the Glazing Trade Hadamar or Ö-Norm B3738. Please see under section 7.3 below regarding situations where this condensation related warranty does not apply.

10 year warranty on the glue connection of glued Georgian/feature bars.

10 year warranty on the function of the material compound timber, thermal foam and aluminium profiles in timber aluminium composite products when adhering to the Internorm fitting and maintenance guidelines.

10 year warranty on the function of the glued connection and sealing of the insulating glass panes with window profiles in timber aluminium composite products when adhering to the Internorm fitting and maintenance guidelines.

10 year warranty where Goods are supplied with marine grade aluminium finish.

The validity of this warranty is at all times conditional upon the following:

- compliance with all relevant requirements of this warranty document; and
- in addition, the Goods being professionally cleaned (with clean water) every 6 months; and
- on each and every occasion on which the Goods are cleaned, the end customer promptly providing to Internorm after cleaning has occurred with evidence in the form of a copy of an invoice or receipt of the professional

7. WARRANTIES

window cleaners, demonstrating that cleaning of the Goods has been completed and showing the date on which they were cleaned. Such receipts to be provided by recorded delivery post to:

Unit D, Colindale Business Park, 2-10 Carlisle Road, London NW9 0HW;
or you can send us a scanned version to the following email address:
office@internorm.com.

We reiterate that, if you fail to send us this evidence of the continued cleaning promptly after each and every time the Goods are professionally cleaned, the warranty will not be valid.

- The warranty is also conditional upon the end customer providing Internorm with access to the Property at which the Goods are installed in order to verify compliance with the above requirements.

5 year warranty for PVD coated entrance door handles against corrosion, if no mechanical damage is apparent.

5 year warranty on weather resistance against unnatural colour changes or cracks in door filling surfaces. There is no warranty on the change of appearance of surfaces as a result of dirt and/or insufficient care.

This 5-year warranty does not apply to the SD10 real-timber surface.

3 year warranty on weather resistance against unnatural change of colour and cracks in surfaces of anodised or powder coated aluminium roller shutters, blinds and window shutter profiles. Minimum value for remaining gloss is the gloss level determined according to DIN EN ISO 2813, which is at least 30% of the original value. Exempt from this warranty are corrosions due to environmental impacts such as fitting window and door elements close to the sea (salt in the atmosphere), close to roads with gritting or in an atmosphere polluted with heavy industry pollutants. There is no warranty on the change of appearance of surfaces as a result of dirt.

3 year warranty on the function of window and door hardware when the Internorm fitting and maintenance guidelines have been followed.

3 year warranty on weather resistance against unnatural change of colour and cracks in surfaces of UPVC roller shutter profiles. When assessing weather

7. WARRANTIES

resistance, the change in colour, according to test systems corresponding to DIN EN 513, must not be greater than level 3 on the greyscale according to DIN EN 20105-A02. There is no warranty on the change of appearance of surfaces as a result of dirt.

7.1. GENERAL INFORMATION

Reporting faults as soon as possible

If you become aware of faults of any kind affecting the Goods, you should bring these to the attention of your Internorm Distributor immediately after the Goods have been delivered to you.

This means that as soon as you receive the Goods you should examine them thoroughly to check for any faults or damage.

Your complaint will not be processed until you have notified the Internorm Distributor in writing about the reported fault, and they have expressly agreed in writing to address the issue.

General circumstances where the warranties are invalid

In addition to your rights which you have in relation to your arrangement with the Internorm Distributor, we also offer warranties relating to the Goods. You should follow the conditions below to ensure that the warranties are not invalidated. Please also see section 7.3 below, regarding the technical limitations of the warranties.

Warranties become invalid due to the following:

- the warranties do not apply if you deliberately or negligently damage the Goods, or if a third party does so (for example a burglar when forcing entry into the premises).
- warranties relating to the surface of the Goods will be invalidated to the extent that surface damages have been caused to the Goods either deliberately or because of negligence or by neglecting to take the necessary care of the

7. WARRANTIES

Goods. This applies especially to difficult to remove, ingrained and persistent stains.

- warranties which we offer relating to the Goods operating properly (i.e. regarding their functionality) will become invalid if:
 - the Goods have not been fitted either by an Internorm Distributor or a party authorised by Internorm or a party who has been trained in how to carry out the installation of Internorm Goods;
 - our fitting and maintenance guidelines in this warranty booklet have not been followed correctly;
 - the assembly and fitting have not been carried out in a completely professional and correct manner according to our guidelines; and/or
 - there is a fault with the functionality of the Goods which is due to the Goods being adjusted incorrectly during the fitting.
- if the faults have been caused by other parts of the building in which they are installed (e.g. if your roof is faulty, or if your building or part of it is affected by subsidence).
- if you make a warranty claim after the deadline indicated in the warranty certificate.
- if you appoint a party other than Internorm (or an Internorm Distributor) to carry out the complete or partial replacement of the Goods or for repair or improvement works under a warranty claim.

Items which have been discounted in price because of any specified manufacturing defects or irregularities may not receive the full benefit of the warranties. You should check the relevant Goods order form issued by the Internorm Distributor to see what warranties, if any, will apply to such discounted Goods.

How to make a warranty claim

When to make a warranty claim? You should make a warranty claim as soon as you become aware of a fault with the Goods, but at the latest by the deadline indicated in the warranty certificate.

The earliest point when a warranty claim can be made is from the date on which the Goods are delivered, and this warranty claim period continues until the applicable deadline.

7. WARRANTIES

The warranty period deadline only applies to your original order – therefore if you receive replacement Goods under the warranty service, this does not result in a new warranty period deadline or the original one being extended.

If you delay making the claim beyond the warranty claim deadline, this may affect the validity of the warranty.

Who to make a warranty claim to? You should first raise the warranty claim with the Internorm Distributor that has delivered the items to you.

If this is not possible, then you should raise the warranty claim with us. To do so, you should contact our office in England, the contact details for which are: Unit D, Colindale Business Park, 2-10 Carlisle Road, London NW9 0HW.

Can I make the warranty claim by phone? No, all warranty claims have to be made in writing; this includes email or letter, but not text message nor social media.

Your statutory rights against the Internorm Distributor

Nothing in this warranty booklet will affect your statutory rights. For instance, the Goods must be of satisfactory quality, must meet their description and must be reasonably fit for purpose. Where the Goods do not meet these standards, then the law entitles you to certain rights and remedies against the party from whom you purchased the Goods.

Please note that where you exercise your statutory rights, this is primarily a matter between you and the Internorm Distributor, not with us, the manufacturer.

For instance, where the Goods are not of satisfactory quality, you have certain rights under consumer rights law against the Internorm Distributor, including:

- the right to reject the Goods and get a refund (subject to certain restrictions including time limits);
- the right to have the Goods repaired; and/or
- the right to have the Goods replaced.

7. WARRANTIES

You can find out more information about such rights and the circumstances in which they apply at the following links:

- For UK customers, visit: www.gov.uk/consumer-protection-rights.
- For Republic of Ireland customers, visit: www.ccpc.ie/consumers

Additional remedies which we offer to you

Where the Goods do not conform with the warranties in this booklet, then we offer remedies to you in addition to the remedies that you have under consumer rights law against the Internorm Distributor (as mentioned above).

This means that, in a situation where the Internorm Distributor is unwilling or unable to repair the defective Goods, we may still offer you a remedy, if we agree that the Goods do not conform with the warranties in this book and we determine that you have not invalidated the warranties, for example by not maintaining the Goods as directed in this booklet.

The remedies we offer to you are either (at our discretion): to repair or replace the relevant Goods.

This will be your sole and exclusive remedy which we offer to you for defective Goods that do not comply with the warranties in this booklet.

Please note that most if not all Goods will contain very minor flaws or defects. For instance, the glass panels in some windows display a very slight “wave” effect. However, all Goods are measured against and pass Internorm’s quality standards and the quality standards used in the industry, and such minor flaws are not covered by our warranties. If you request that the Goods are repaired or replaced, particularly for minor aesthetic reasons, then we have the right to refuse to do so if we reasonably consider that the Goods do conform to these applicable quality standards.

What financial costs, losses and expenses we are responsible to you for

7. WARRANTIES

We will not attempt to exclude or limit our liability to you where it is unlawful for us to do so – for instance, we do not attempt to exclude or limit our liability to you where you suffer personal injury or death because we have acted negligently.

Again, nothing in this booklet affects your legal rights which you may have against a manufacturer, including, for UK customers, under the Consumer Protection Act 1987, and, for Republic of Ireland customers, relevant Irish or European Union consumer protection legislation.

Regardless of whether we decide to offer a replacement or repair faulty Goods, our total costs of doing so will not exceed GBP £3,000. This means that if the repair work will cost GBP £4,000, then we will agree to pay GBP £3,000 and we will ask that you pay the remaining GBP £1,000. Similarly, if the cost to replace the windows is GBP £5,500, then we will only pay GBP £3,000 and will ask you to pay the remaining GBP £2,500. Our costs are likely to include labour, equipment as transport, as well as the cost of the new parts or new Goods themselves.

Please note that, each customer is only covered up to a maximum of GBP £3,000 per order, regardless of how many Goods purchased under that order are defective.

If we exchange the Goods (e.g. we have to remove an installed window), we will cover the costs arising from damage caused by the removal and exchange of the Goods (e.g. damage to wallpaper and plasterwork), provided that our overall maximum contribution does not exceed GBP £3,000 as.

What costs might you be responsible for?

If the costs associated with repairing or replacing the Goods exceed GBP £3,000, then you must meet the cost of anything above the GBP £3,000 figure. If you make a claim, we will obtain a quote for the work required from one of our contractors. If this is lower than GBP £3,000 and you have not made a warranty claim for the same order before, then we will meet all of this cost without asking for any payment from you. If the quote is over GBP £3,000 (either on its own or together with other warranty claims for the same order), then we will communicate with you and seek to reach an agreement with you about your contribution. You will need to pay your

7. WARRANTIES

contribution to us or directly to our contractor if applicable, before we commence the repair or replacement service.

What other losses are we not responsible for?

We will not be responsible to you for any unforeseeable losses. Loss or damage is foreseeable if either it is obvious that it will happen or if, at the time you ordered the Goods, both we and you knew it might happen.

As stated at the beginning of this section 7, the warranties only apply to purchases of our standard Goods, not to non-standard Goods (e.g. oversized windows).

We will not be responsible for costs associated with any damage to your property caused by defective Goods (for instance if one of our windows leaks, causing water damage to your floor, we will not be responsible for this). We are also not responsible for the cost of repairing any pre-existing faults or damage to your property.

We only supply the Goods for domestic and private use. If you use the Goods for any commercial, business or re-sale purpose, we will have no liability to you for any loss of profit, loss of business, business interruption or loss of business opportunity.

Fitting or removal costs (material and labour costs) where the Goods are not fitted according to our guidelines (as set out in the Datasheet, Product Handbook and Fitting Guidelines).

If you have decorated the Goods (for example, painted some artwork on a window), we will not be responsible for replacing such artwork or decoration if the Goods are removed, nor will we be responsible for the cost of restoring the artwork or decoration if it is damaged if we repair the Goods.

Our performance of the repair or replacement services are conditional on you providing access to the Goods in question. If the Goods are not reasonably accessible (for example a new staircase, or other feature which proves to be an obstacle, has been installed which prevents the Goods from being accessed), then we may refuse to repair or replace the Goods unless, using our reasonable efforts, we are able to gain access via another method.

7. WARRANTIES

Circumstances in which we may have to charge for our costs

If we are dealing with a warranty claim but are prevented from gaining access to the premises, then we may charge our reasonable costs as a condition of continuing to deal with a warranty claim. This would include situations where our access to the relevant premises is denied or access is not practicable on health, safety or other appropriate grounds and this requires us to reschedule the visit to another date.

Limits on future warranty claims

If we perform warranty services, e.g. we repair or replace the Goods, then the original warranty period will still apply. In other words, there will not be a new warranty period from the point at which the Goods are repaired or replaced.

7.2. FITTING ADVICE

All Goods will likely require “fine adjustments“ when being fitted. These fine adjustments are to be carried out as part of the fitting service provided by the Internorm Distributor (or other approved fitting company).

The Internorm fitting and adjustment guidelines must be followed in each case, regardless of who fits the Goods.

Any subsequent necessary adjustment works, maintenance or changes to the Goods will be charged for.

Faults in fitting and any faulty functions resulting from incorrect fitting are to be covered by the respective fitting company and are not part of Internorm warranties.

7.3 TECHNICAL LIMITATIONS OF THE WARRANTY

Loads - The warranties apply as long as the usual loads stated in common technical standards are not exceeded. If you have any questions concerning the applicable loads, then please get in touch with Internorm who can provide you with details about the common technical standards that apply.

Use - If the Goods are used in an unusual way, no part of the warranty applies.

7. WARRANTIES

Connecting Goods together - The warranty services which we offer only apply where a single Goods are installed. If two or more Goods are connected to form continuous window/door surfaces, separate written approval from Internorm is necessary. In addition, all warranties will be invalid, if the connection of single Goods is not carried out professionally or does not comply with technical standards set out in this booklet.

Surface damage - Surface damage caused by aggressive or scouring cleaning agents is not covered by the warranties. Internorm recommends regular cleaning with the Internorm care set.

Surface changes caused by chemical reactions, e.g. zinc particles, leachates from the facade (cement asbestos or other) and cement asbestos window sills on white UPVC profiles, glass surfaces and on powder coated or anodised surfaces, are not covered under the warranty.

There is no warranty on the change of appearance of surfaces as a result of dirt. Different colour changes in different elements caused by the fitting location between elements exposed to weather (e.g. south-facing) and elements in a protected position (e.g. north-facing) are not covered under the warranty.

For timber elements it is clearly indicated that aggressive cleaning agents (containing ammonium chloride, alcohol, as well as acidic or scouring cleaning agents) will damage the timber surface and will invalidate the warranty. Timber elements are to be regularly checked for damage (hail damage, natural cracks in timber, scratches etc.) and possibly repaired for the short term according to the Internorm maintenance guidelines in this booklet. Any failure to do so may invalidate the warranty.

The surface warranty does not apply to fitting material.

Mould - Deposits of dust, pollen, dirt etc. on gaskets, profiles and glass surfaces in connection with humidity cause the formation of microorganisms and therefore mould. This is a natural process and does not reflect a lack of quality in the Goods. Formation of mould, therefore, is excluded from the warranties.

7. WARRANTIES

Condensation on glass surfaces - We obviously cannot control climatic conditions, such as the difference between the temperature in your premises and the outside air temperature. Under certain climatic conditions, water condensation may occur:

- on the indoor facing side of the glass; or
- on the outdoor, weather-exposed side of the glass; or
- for windows with integrated blinds in the unsealed cavity where the blind is located,

and in the above situations, the warranty regarding condensation does not apply.

On insulating glass with especially high thermal insulation, temporary condensation may also occur on the weather-exposed side, if the outside humidity (relative air humidity outside) is very high and the air temperature is higher than the temperature of the pane surface. With especially extreme temperature differences, icing may also occur. This can be solved by shading the window and door elements (e.g. with roller shutters, projecting roofs etc.).

The wetting properties of glass surfaces on the outside of insulating glass may differ due to, e.g. marks from rollers, fingers, labels, paper structure, vacuum suckers, sealing remains, smoothing agents, sliding agents or environmental impact. On wet surfaces due to rain, dew or cleaning water, differing wettability may be observed. Therefore, these marks do not represent defects and are not covered under the warranties.